

FIG.1A

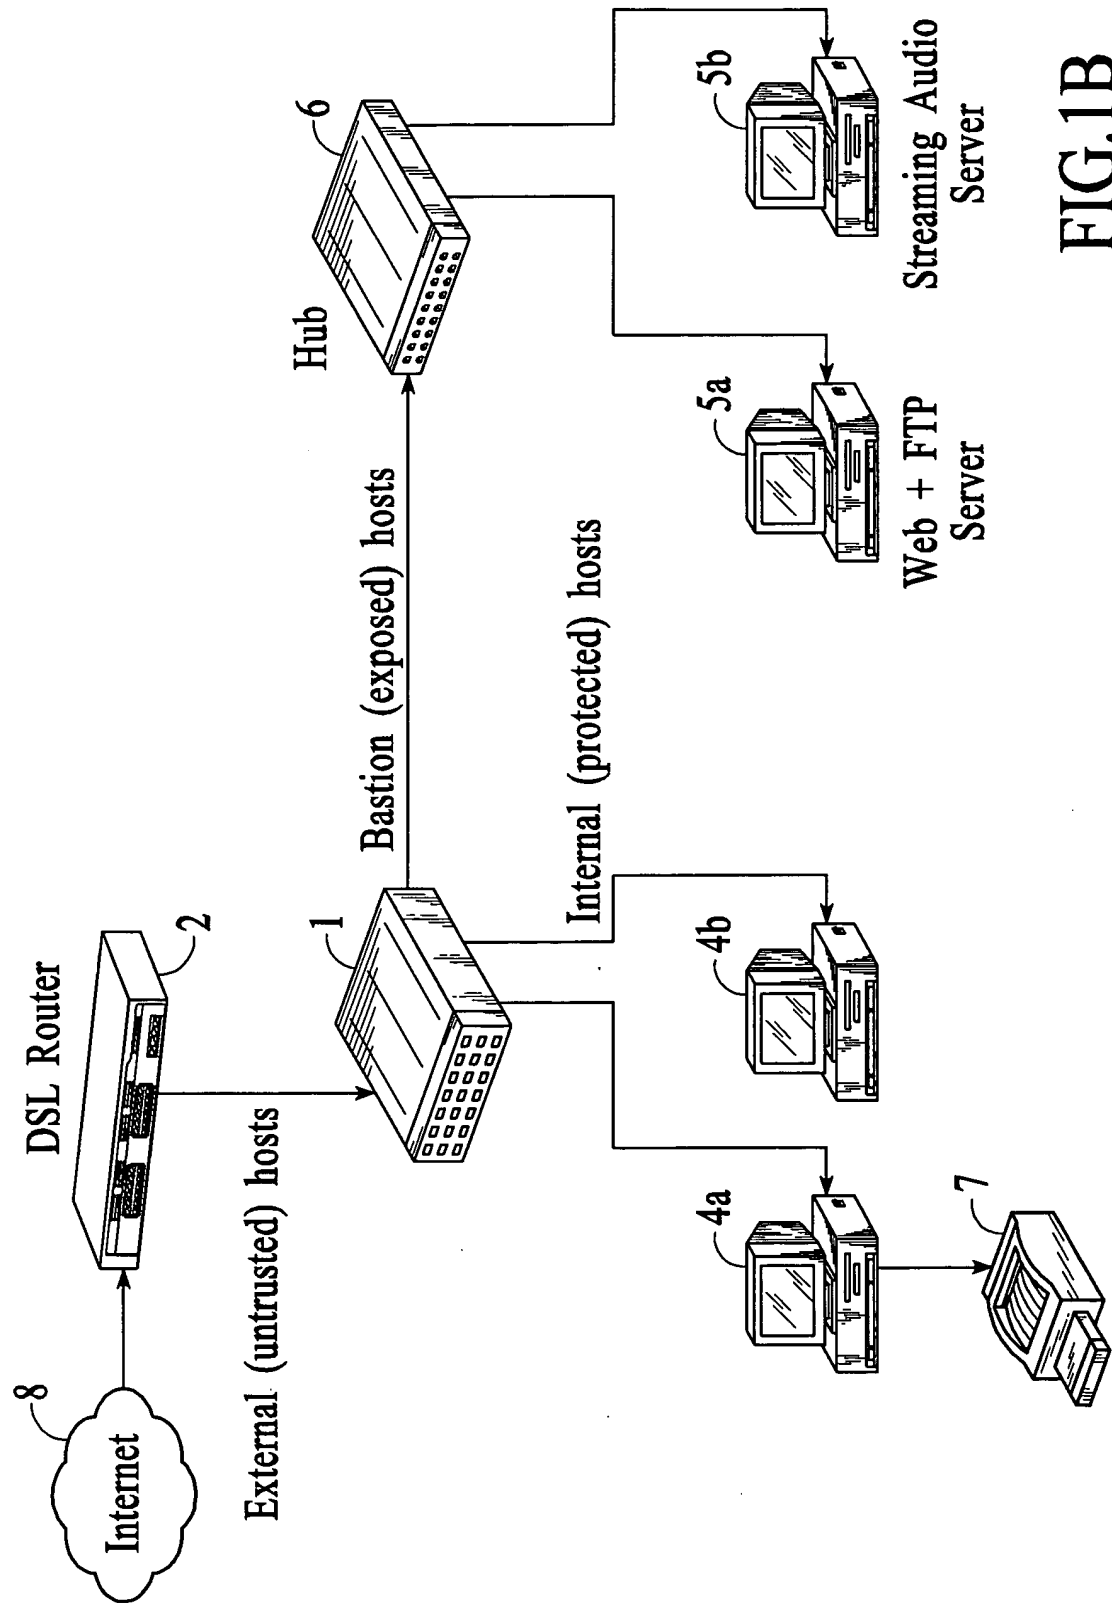
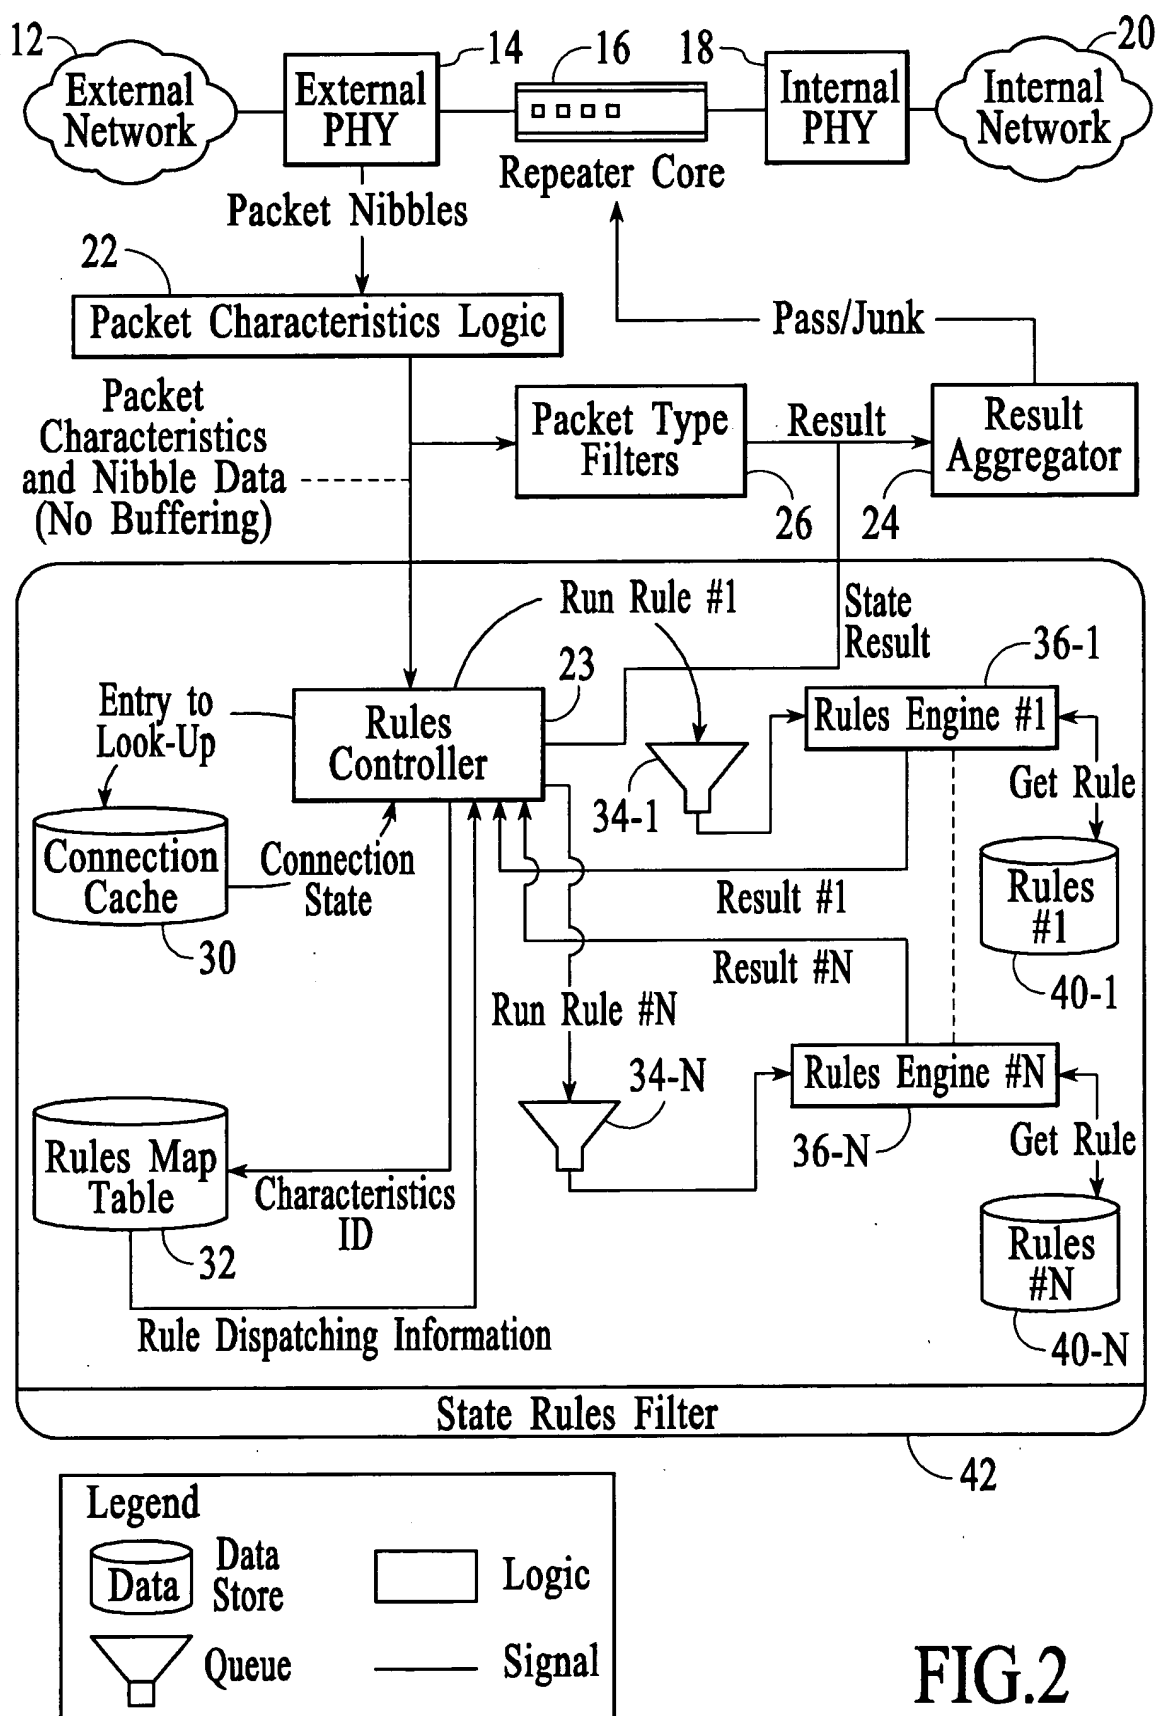


FIG.1B



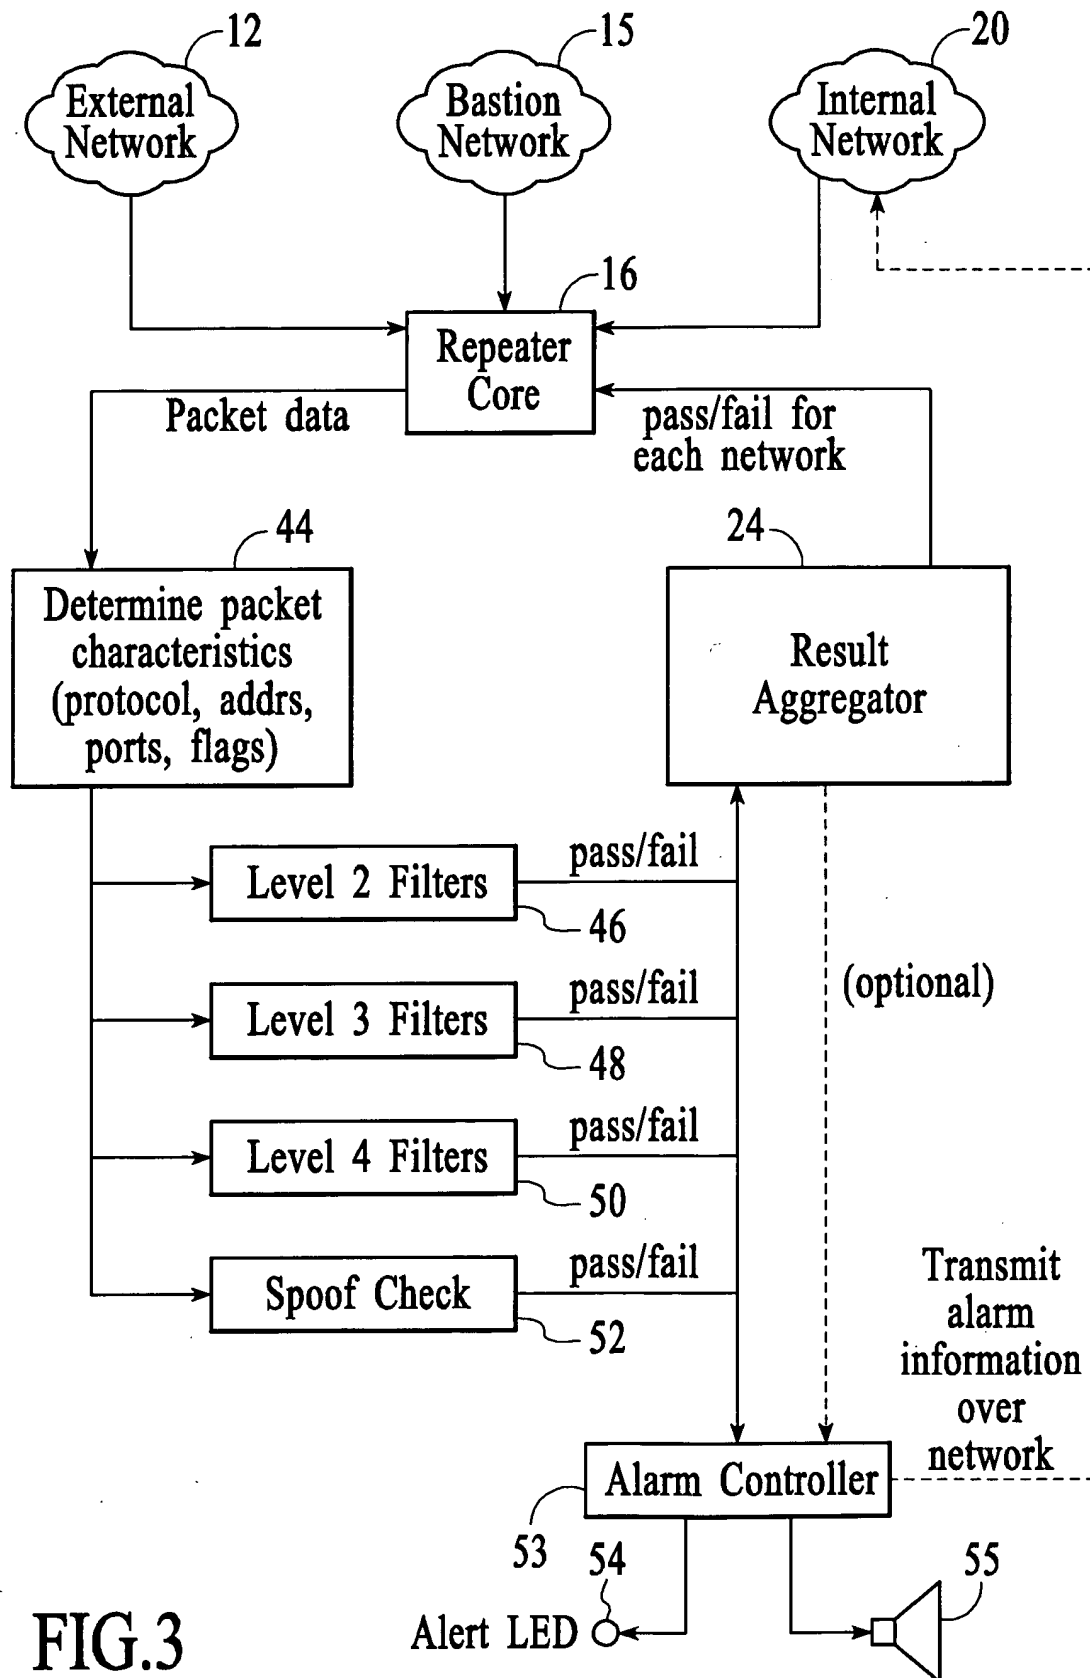
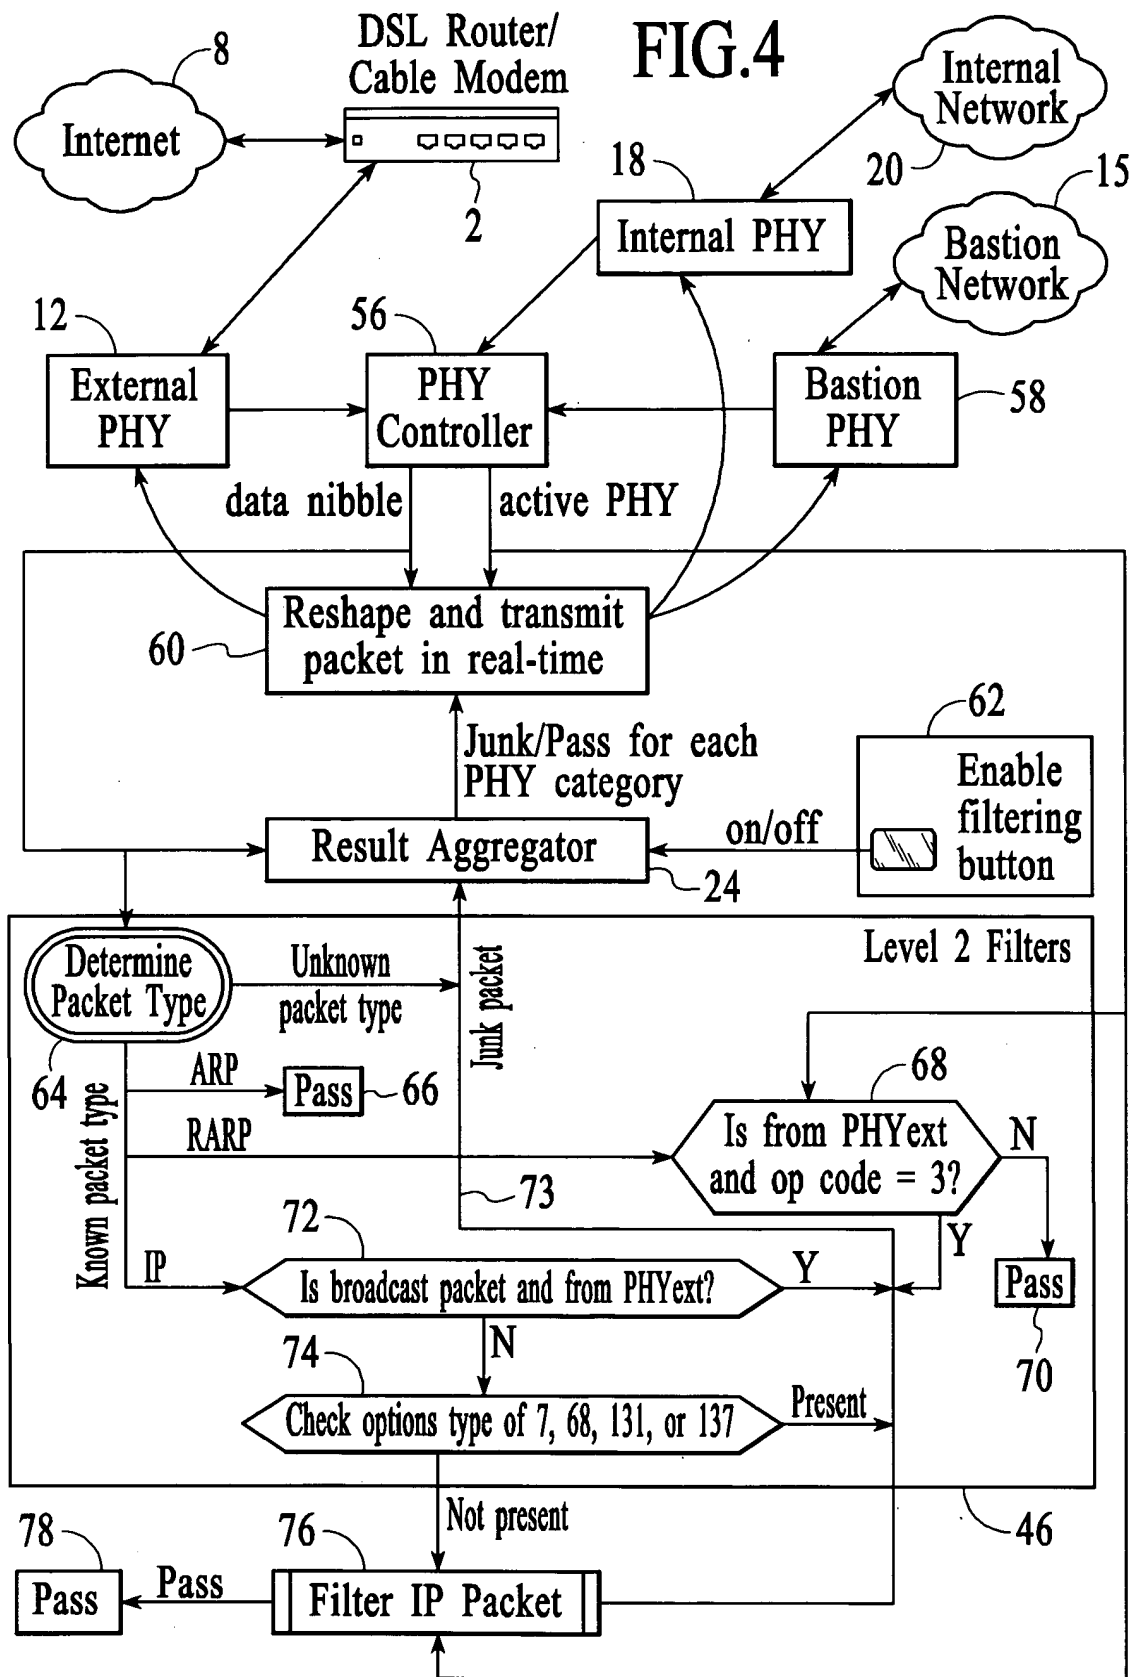


FIG.4



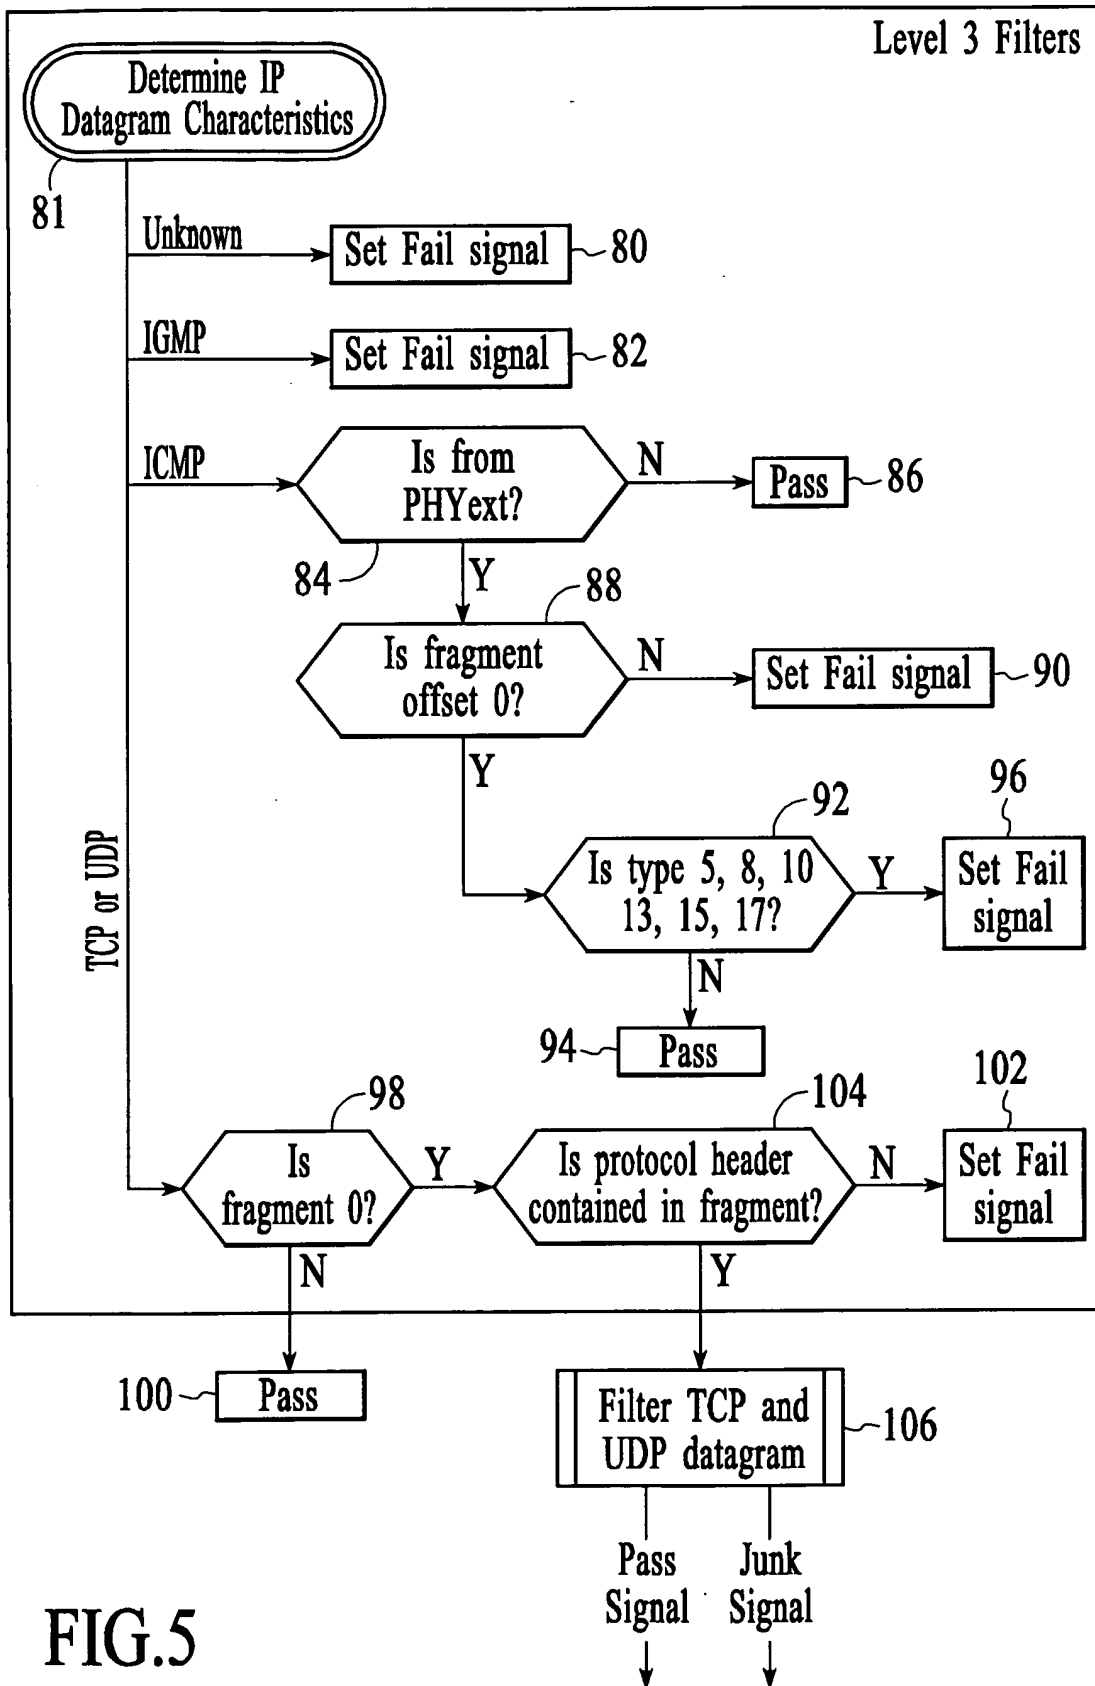


FIG. 6

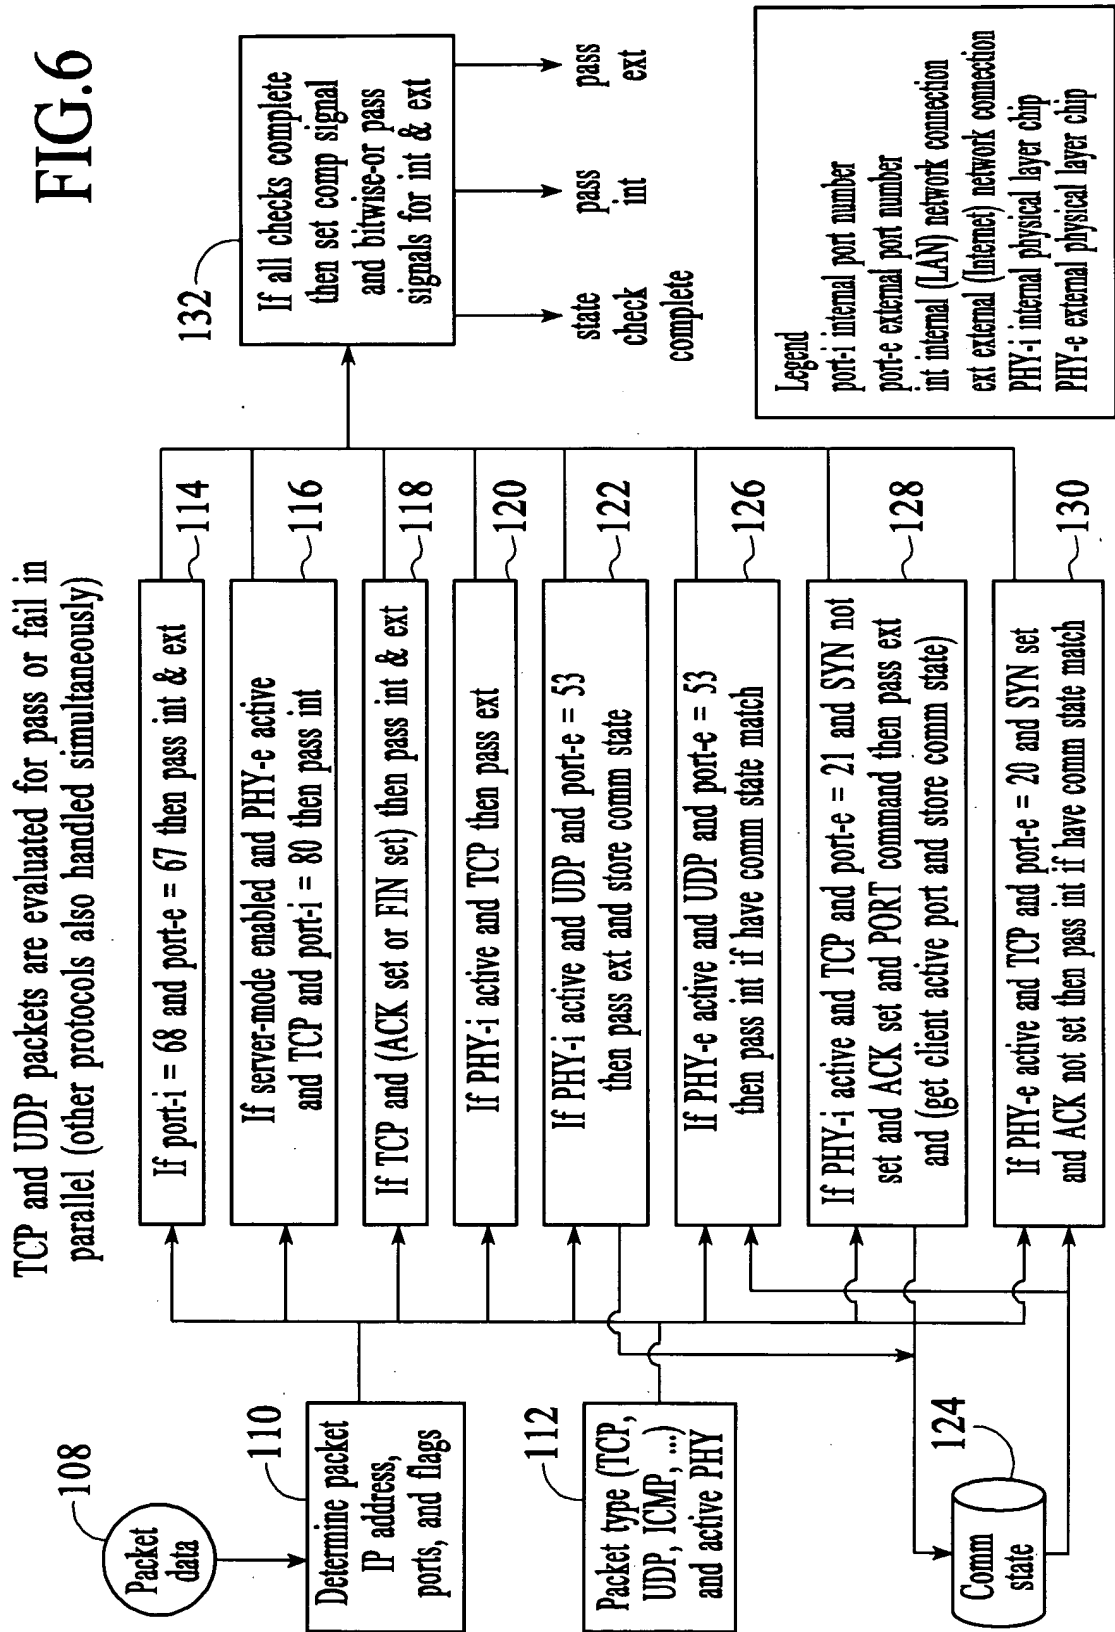
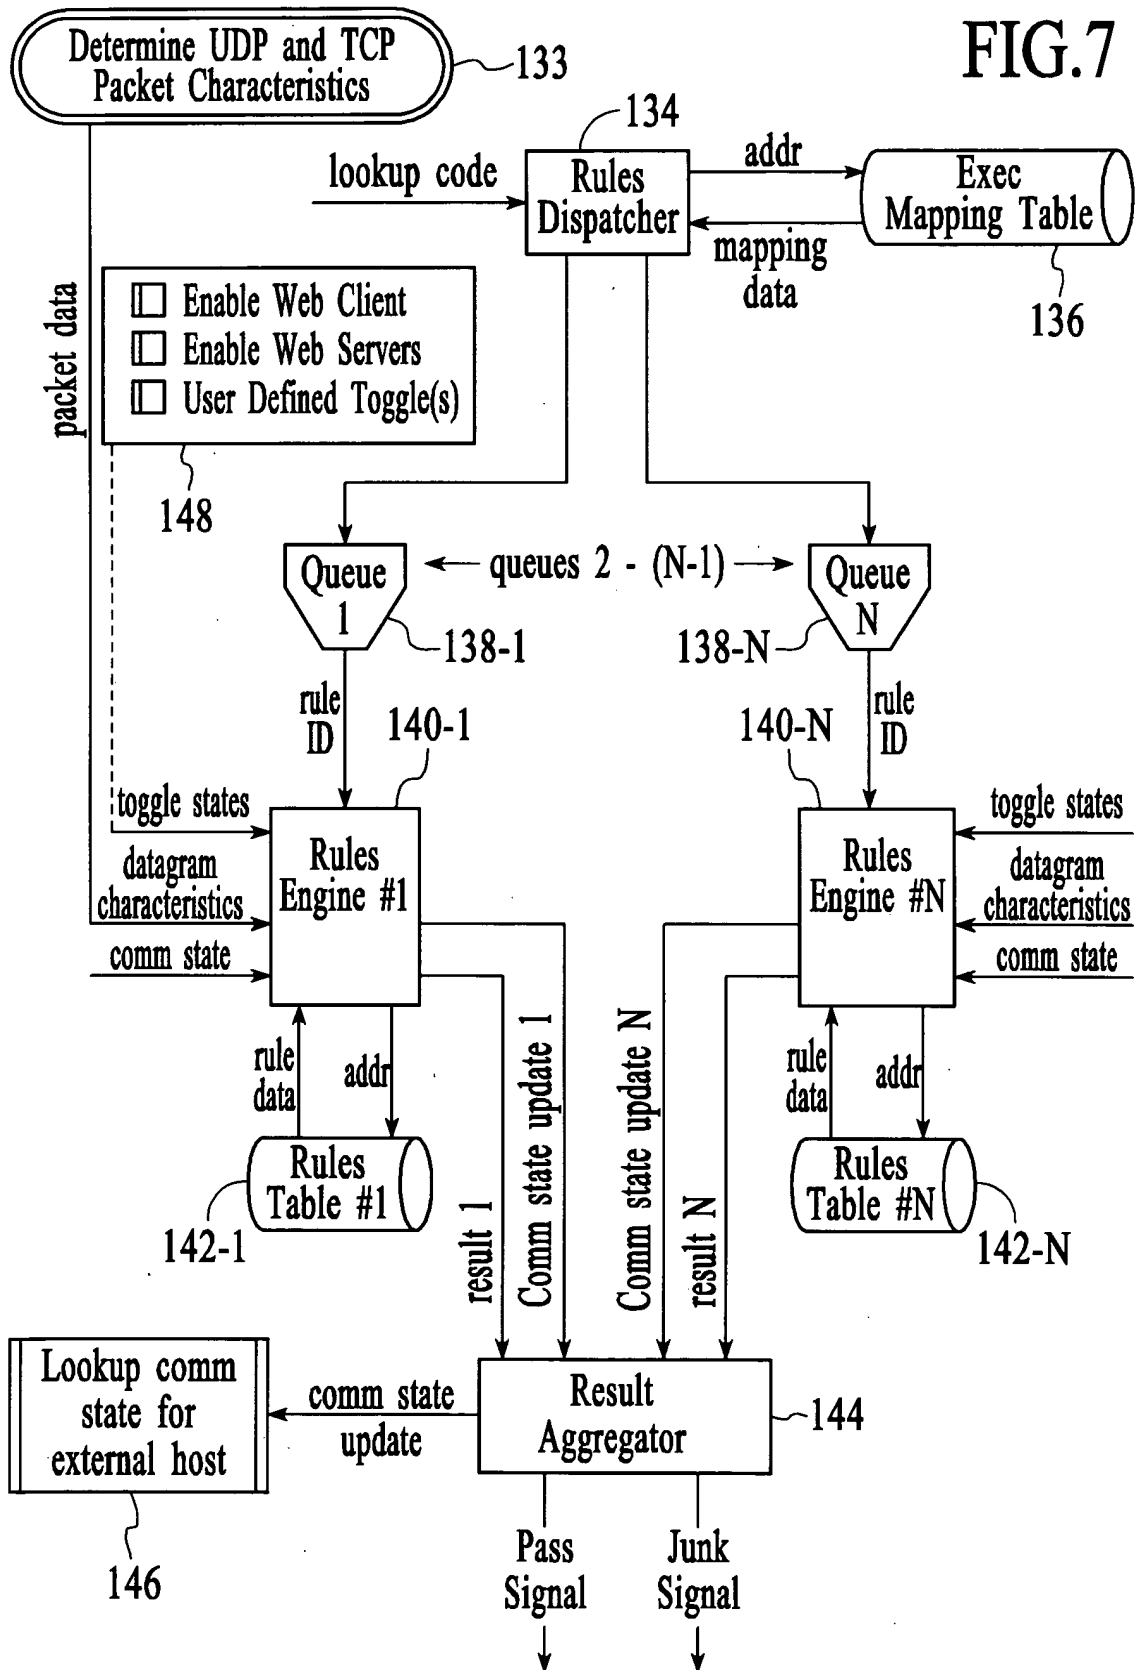


FIG. 7



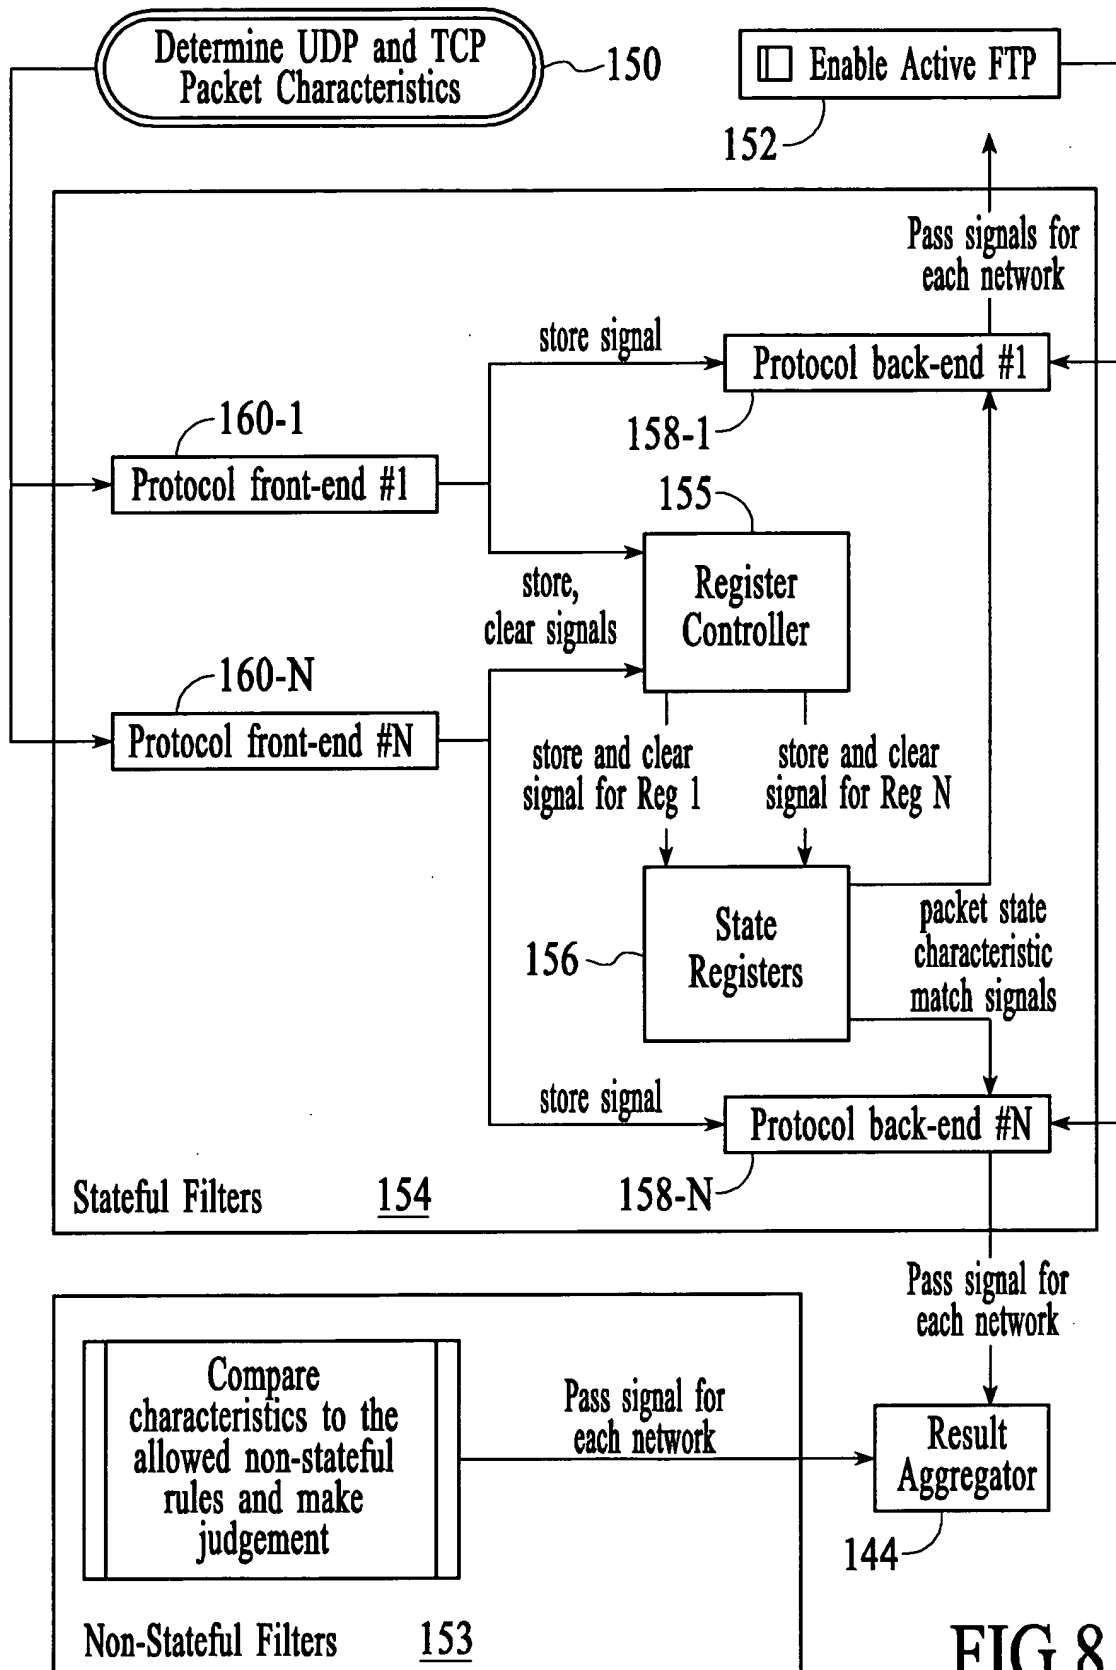


FIG. 8

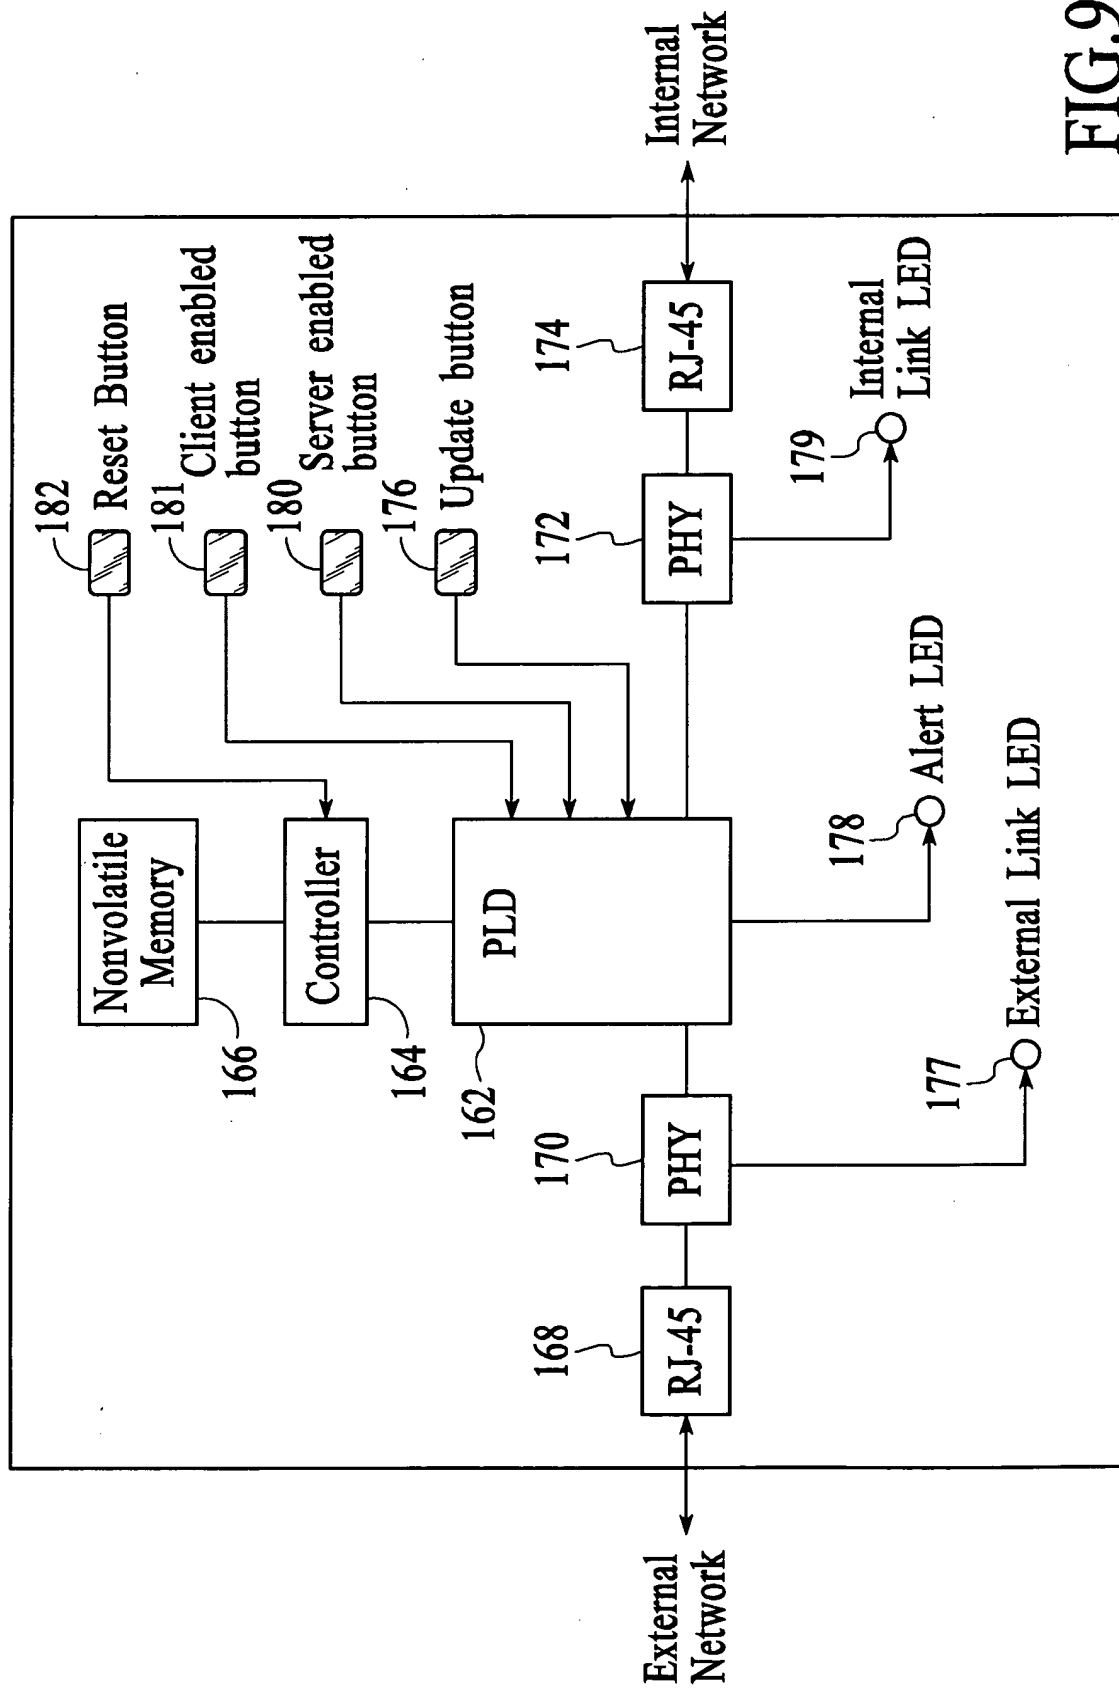


FIG. 9

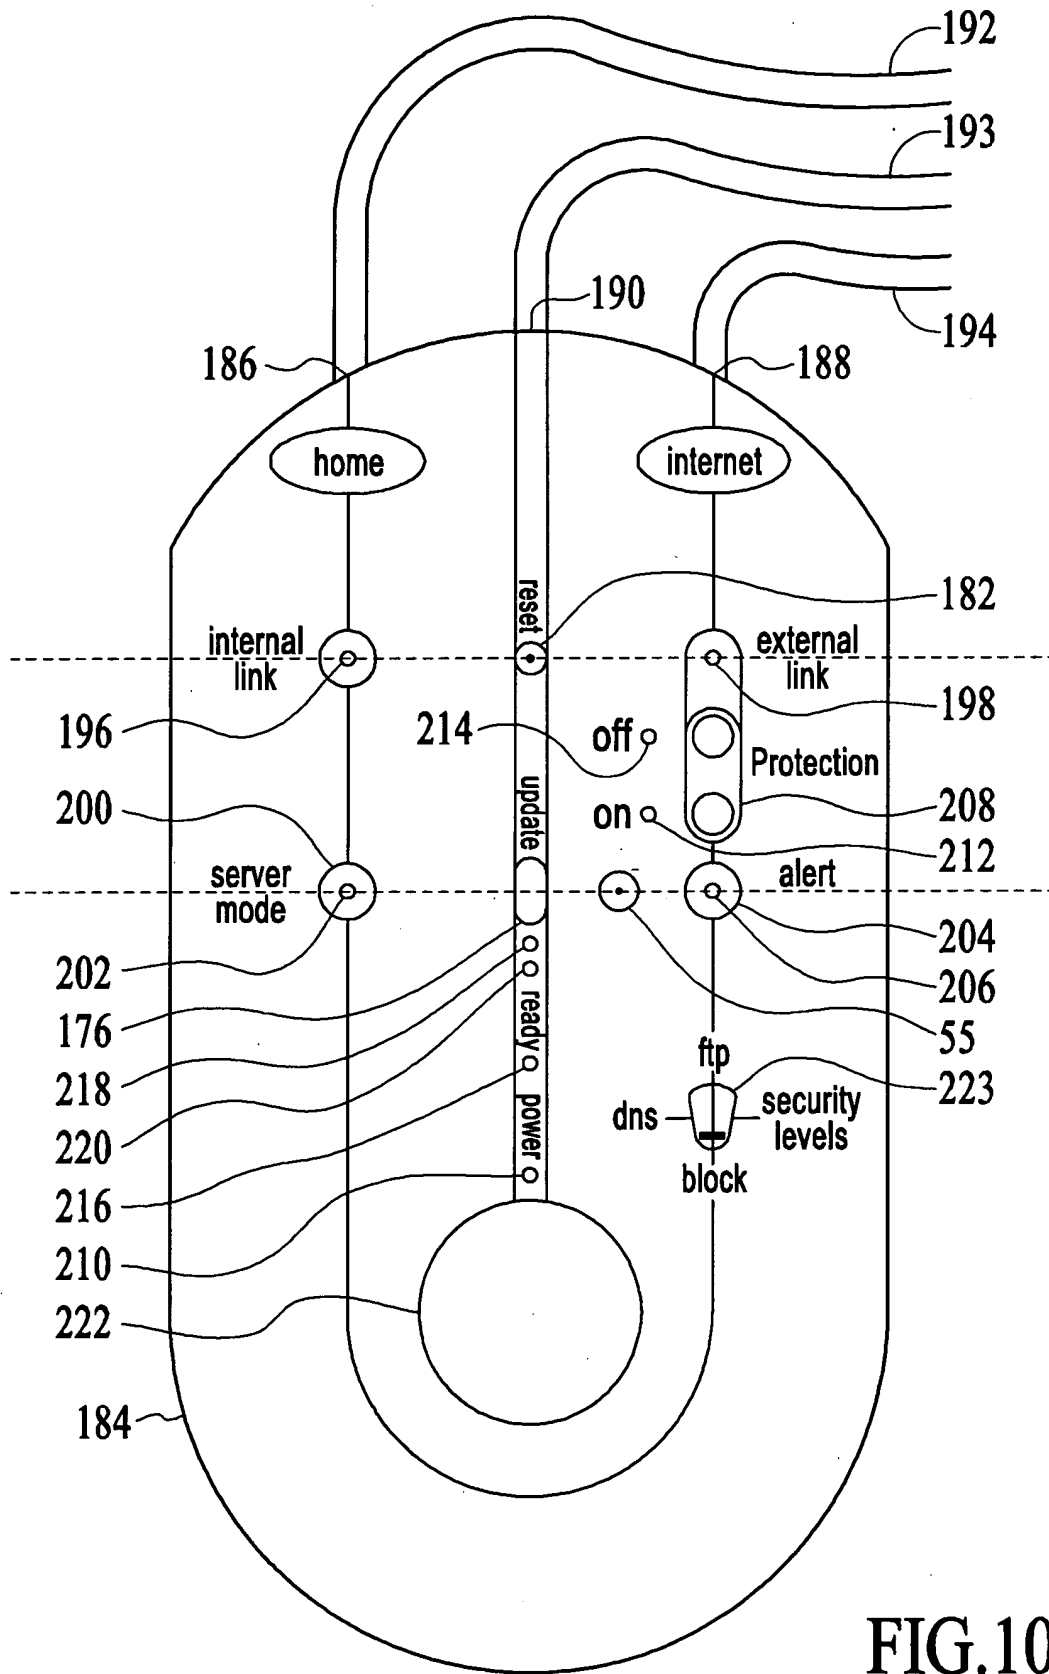


FIG.10

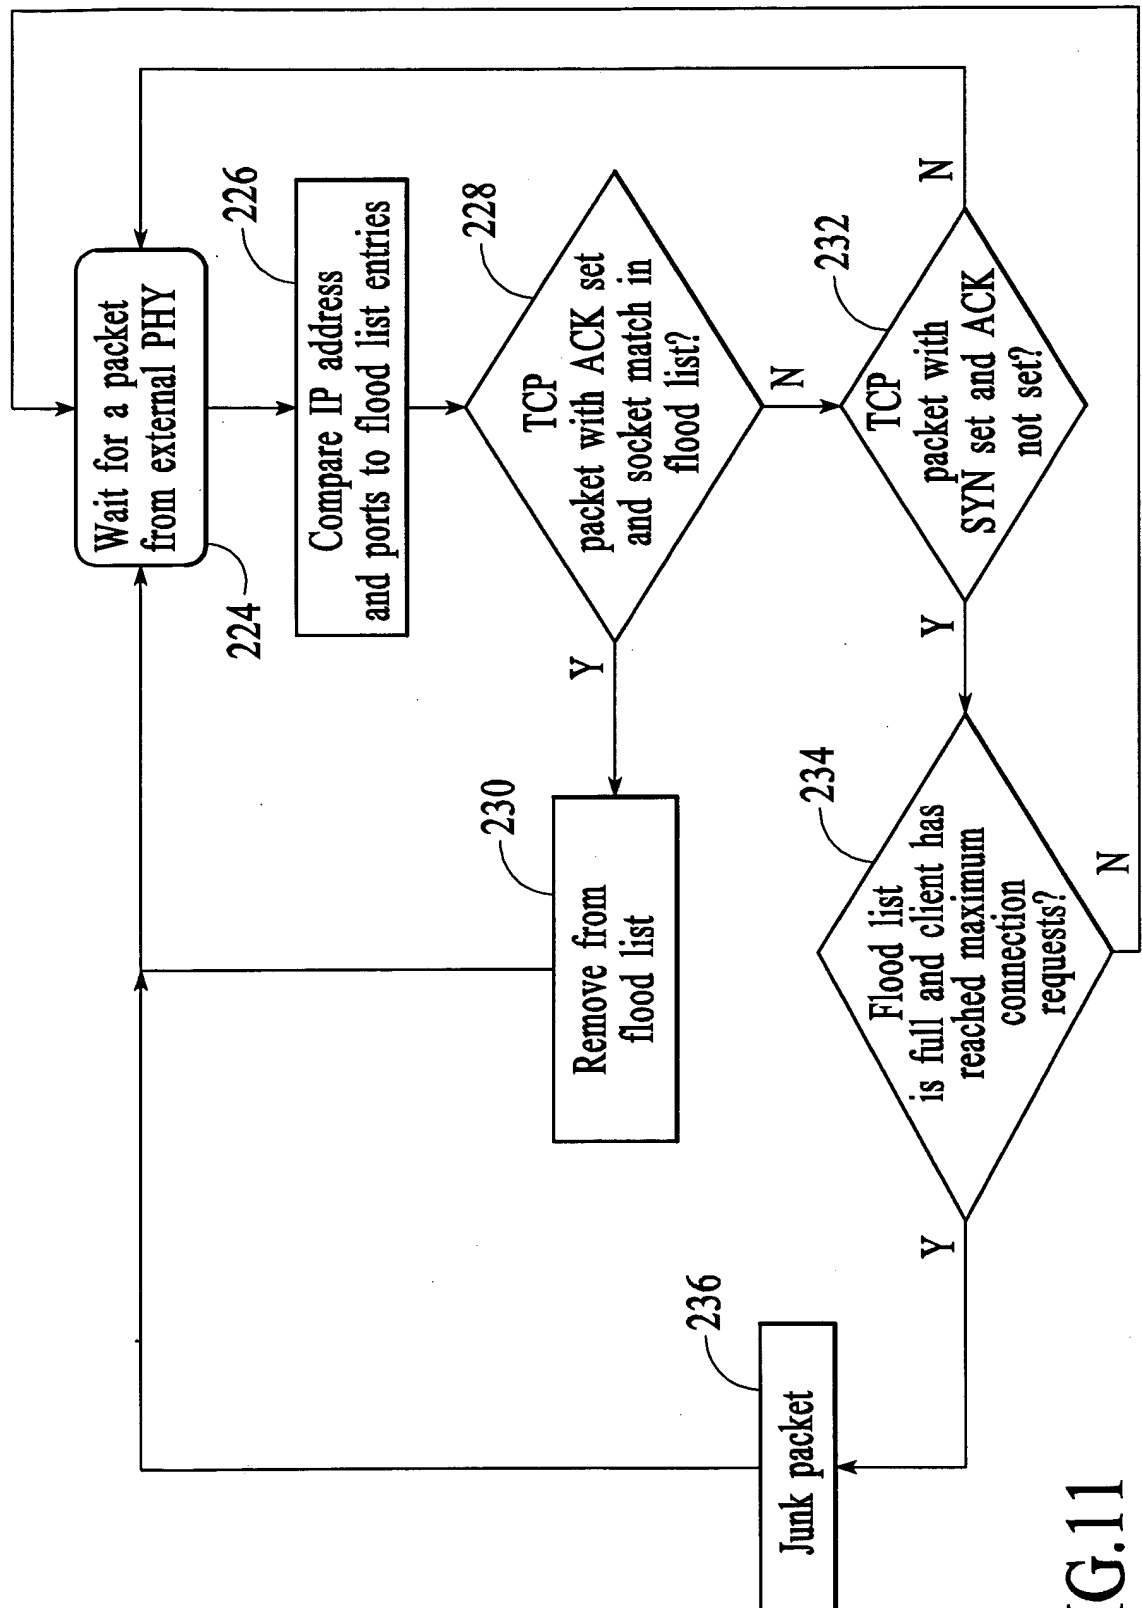
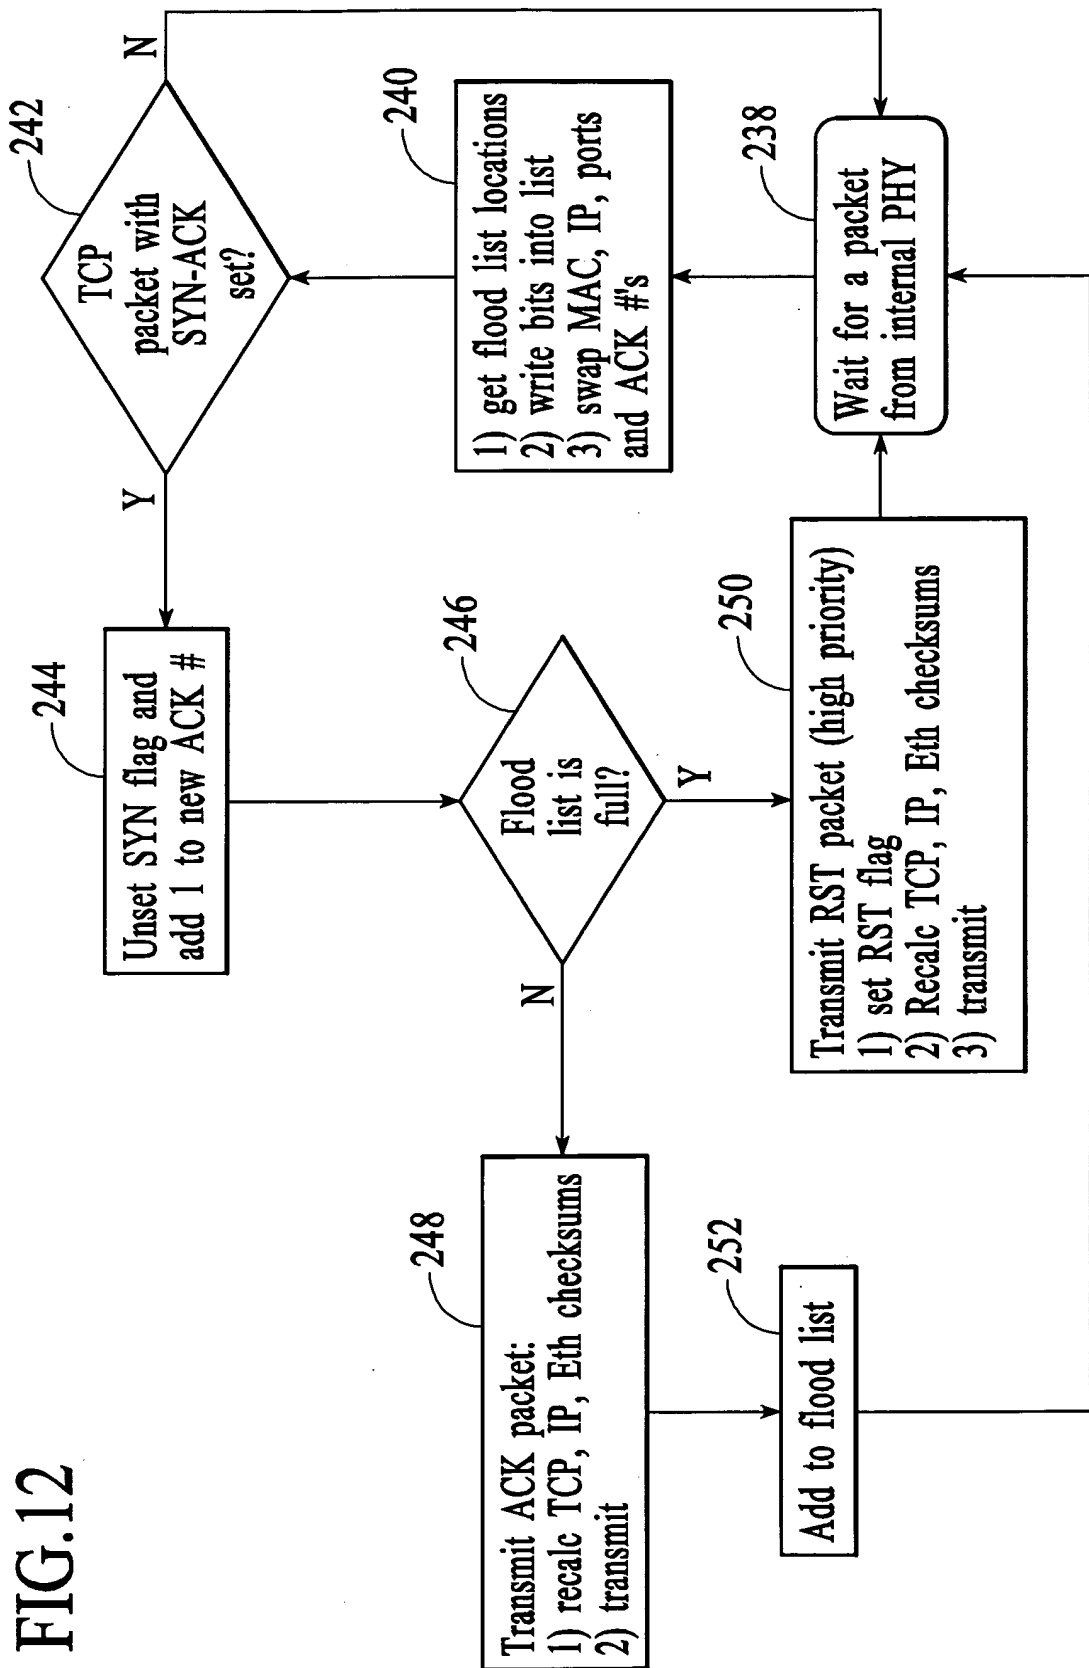


FIG.11



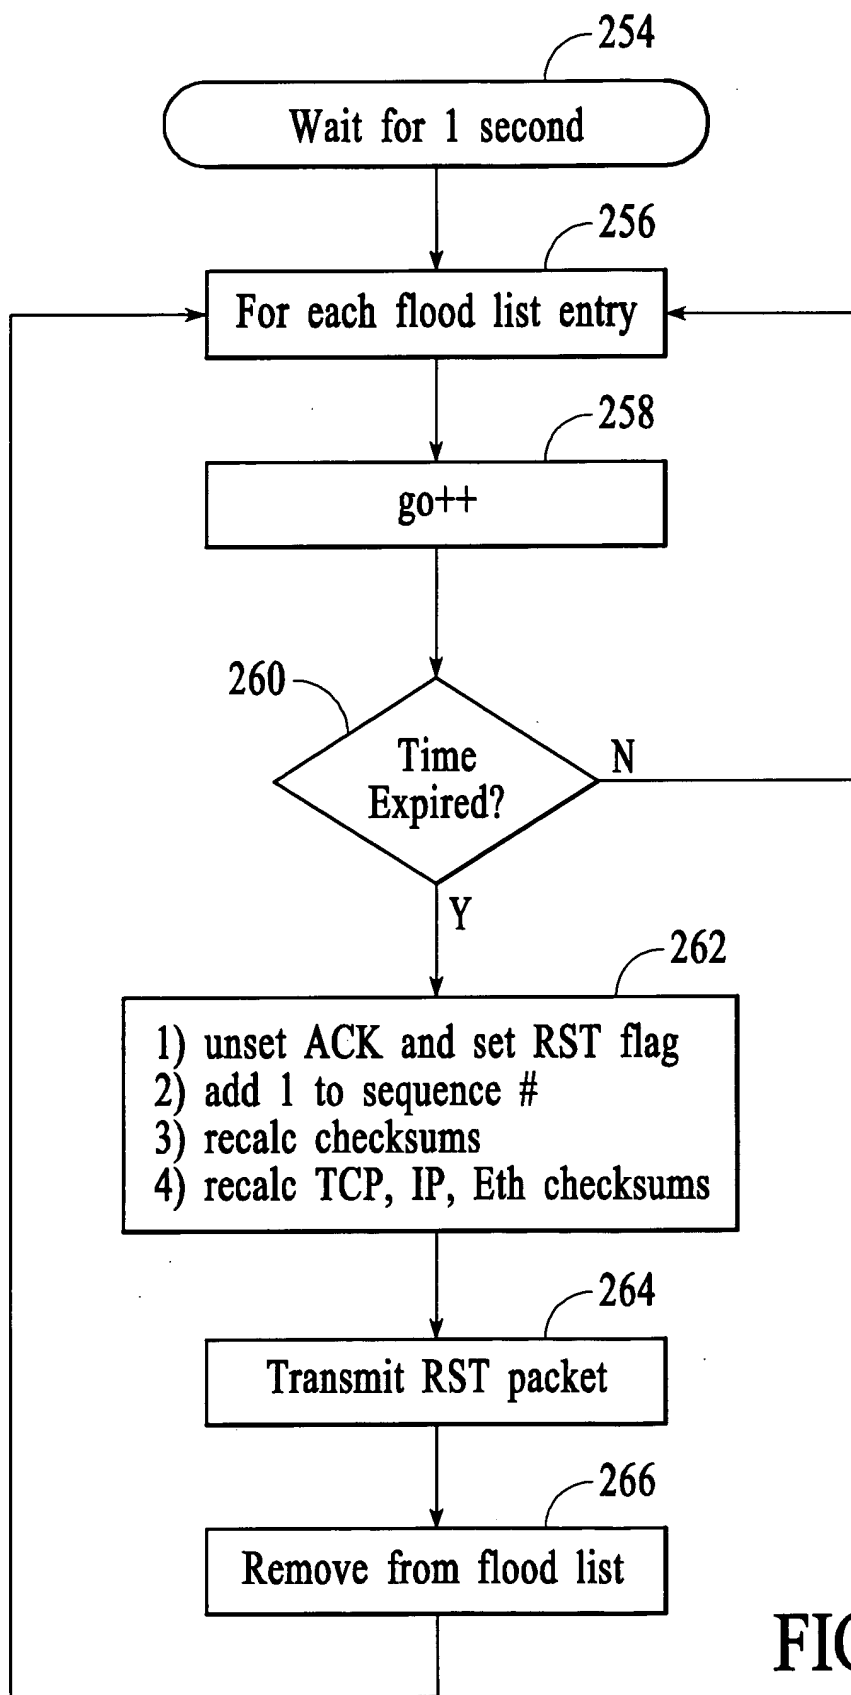


FIG.13

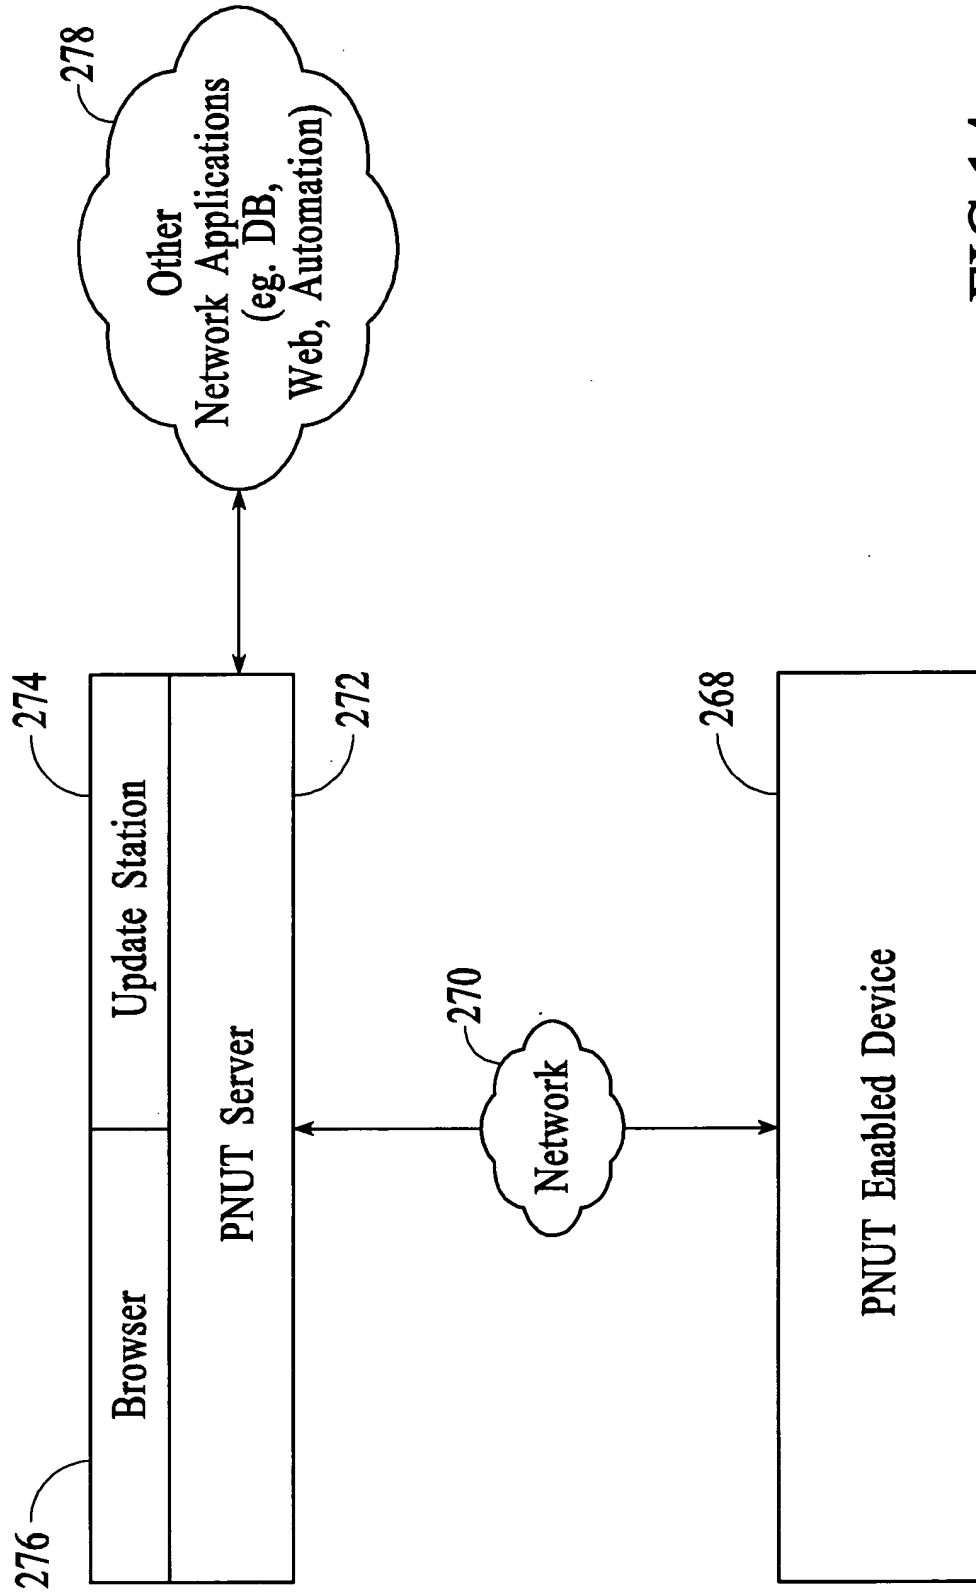


FIG.14

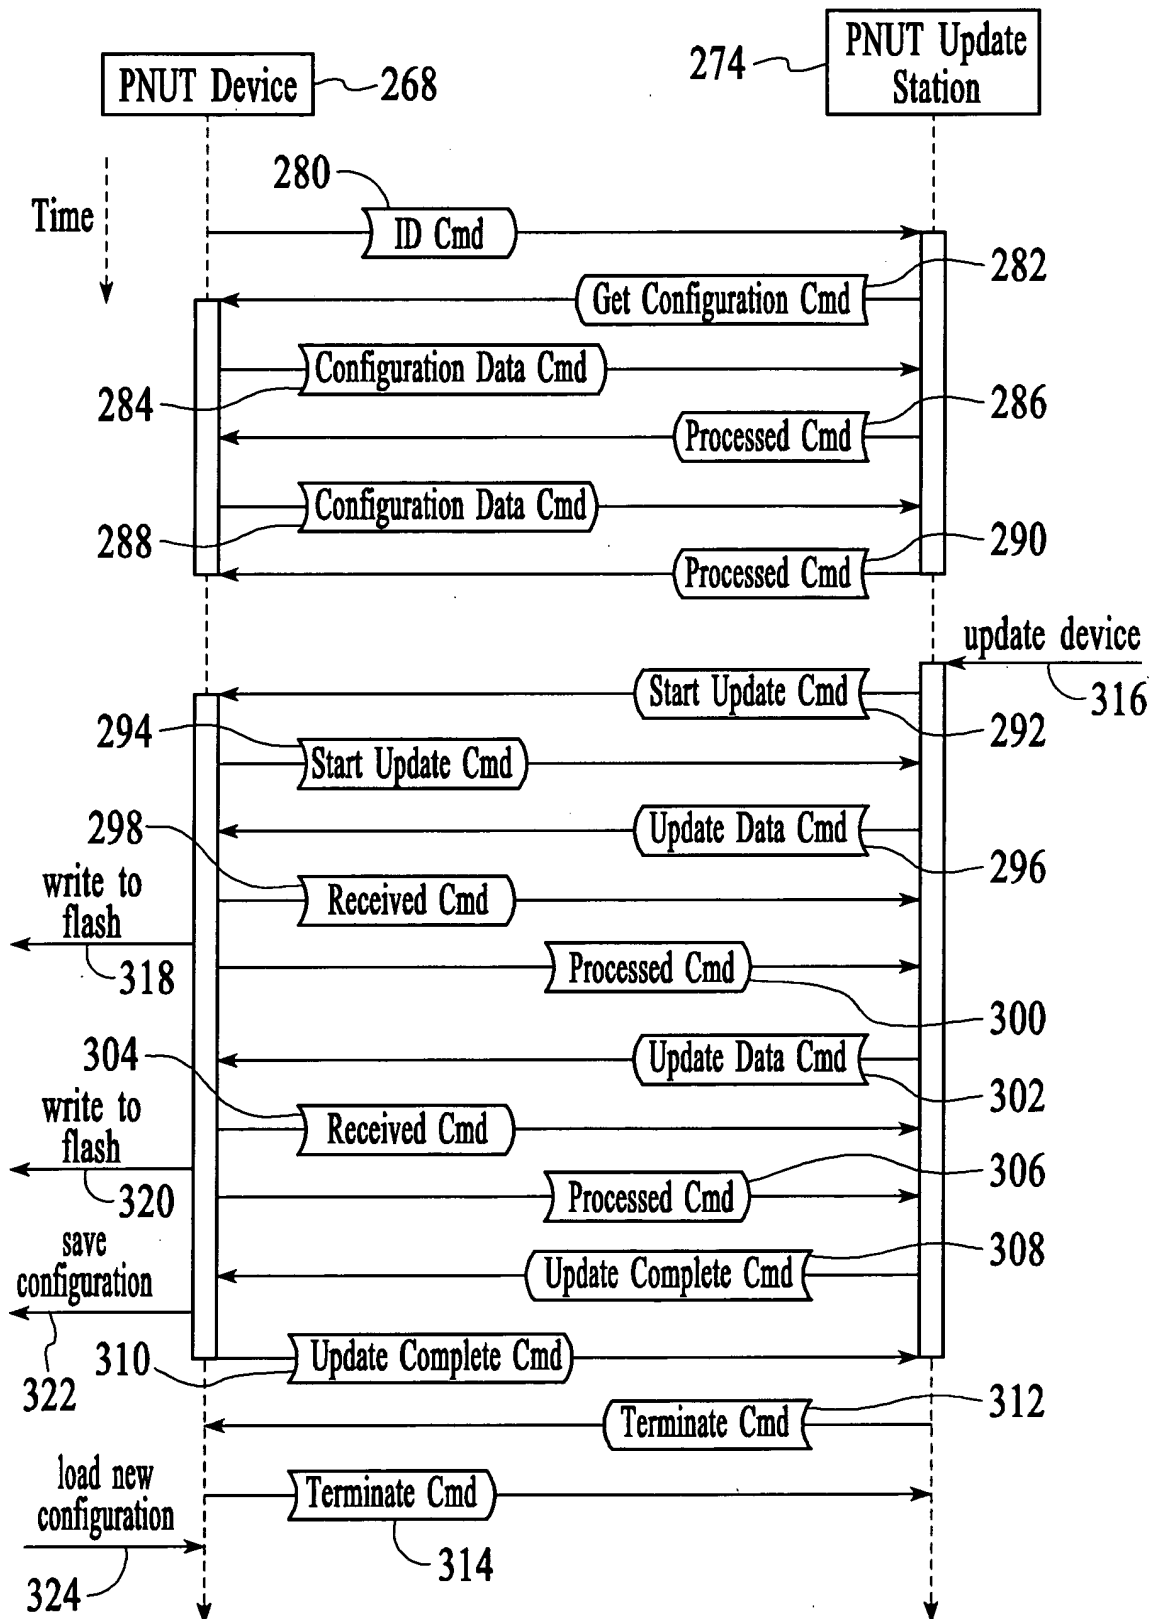


FIG.15



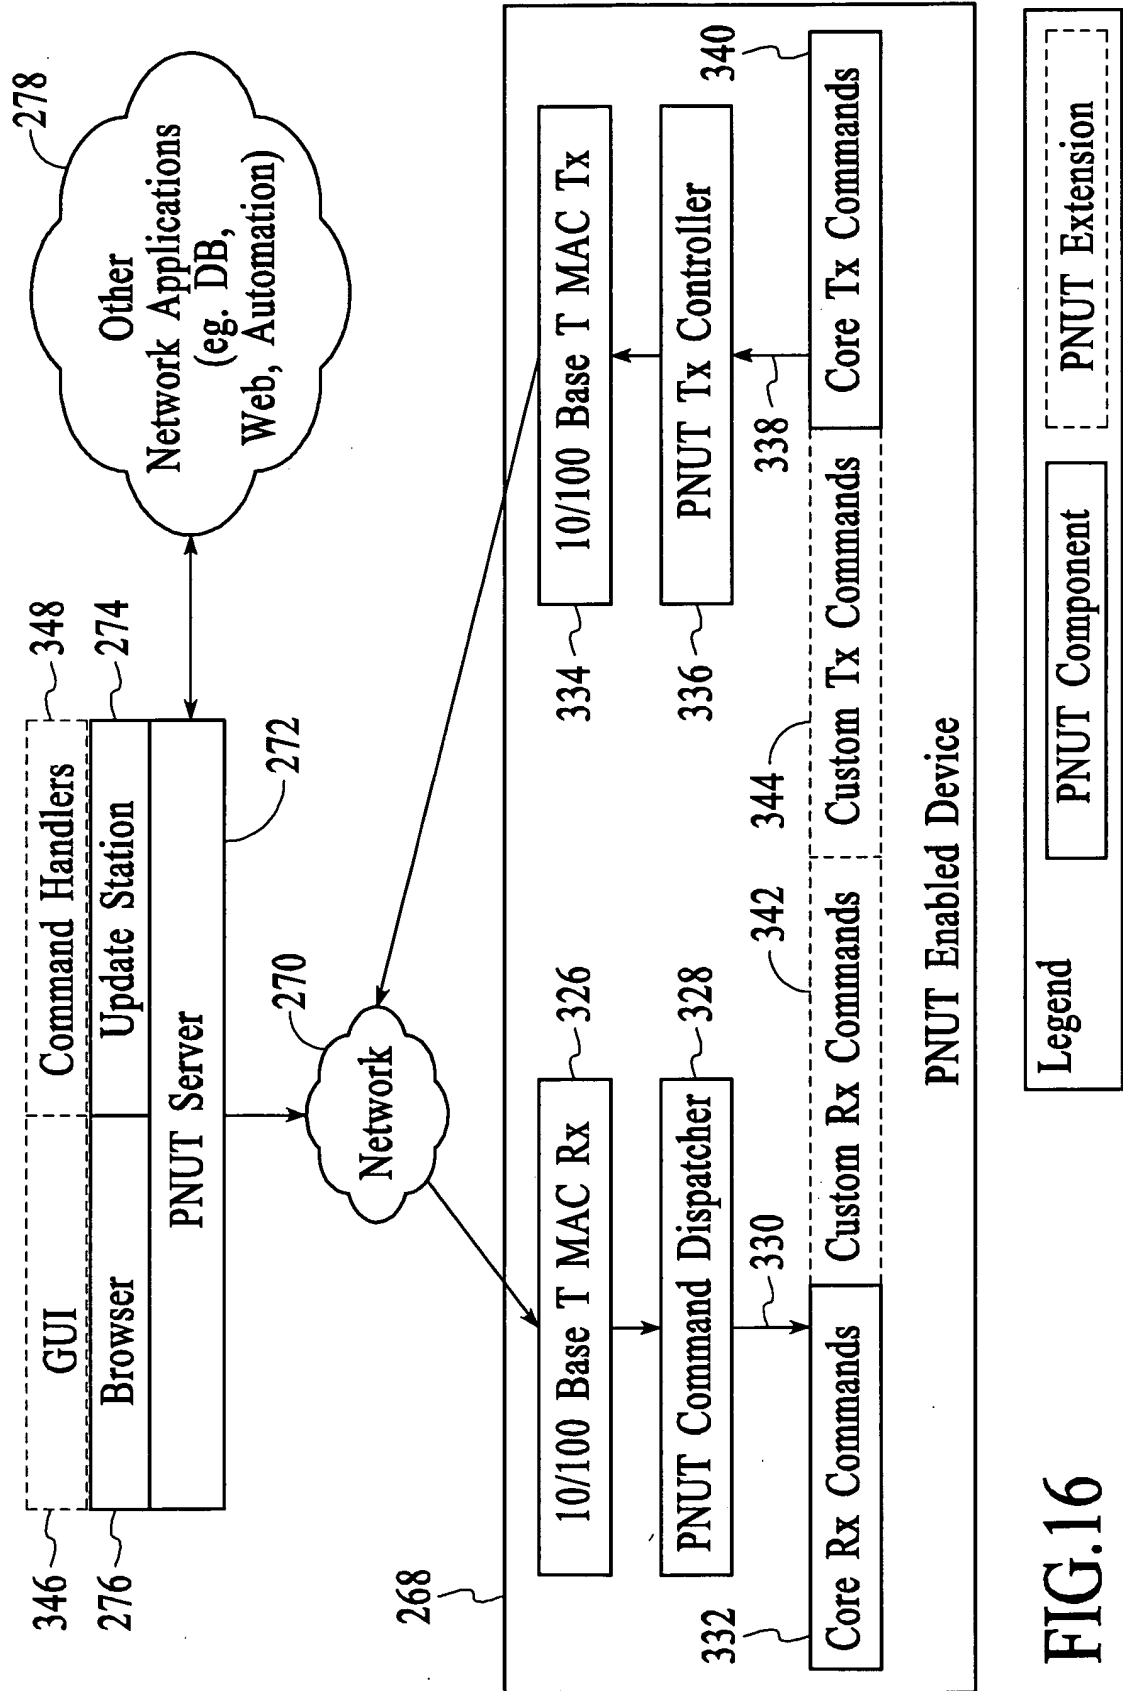


FIG.16

FIG.17

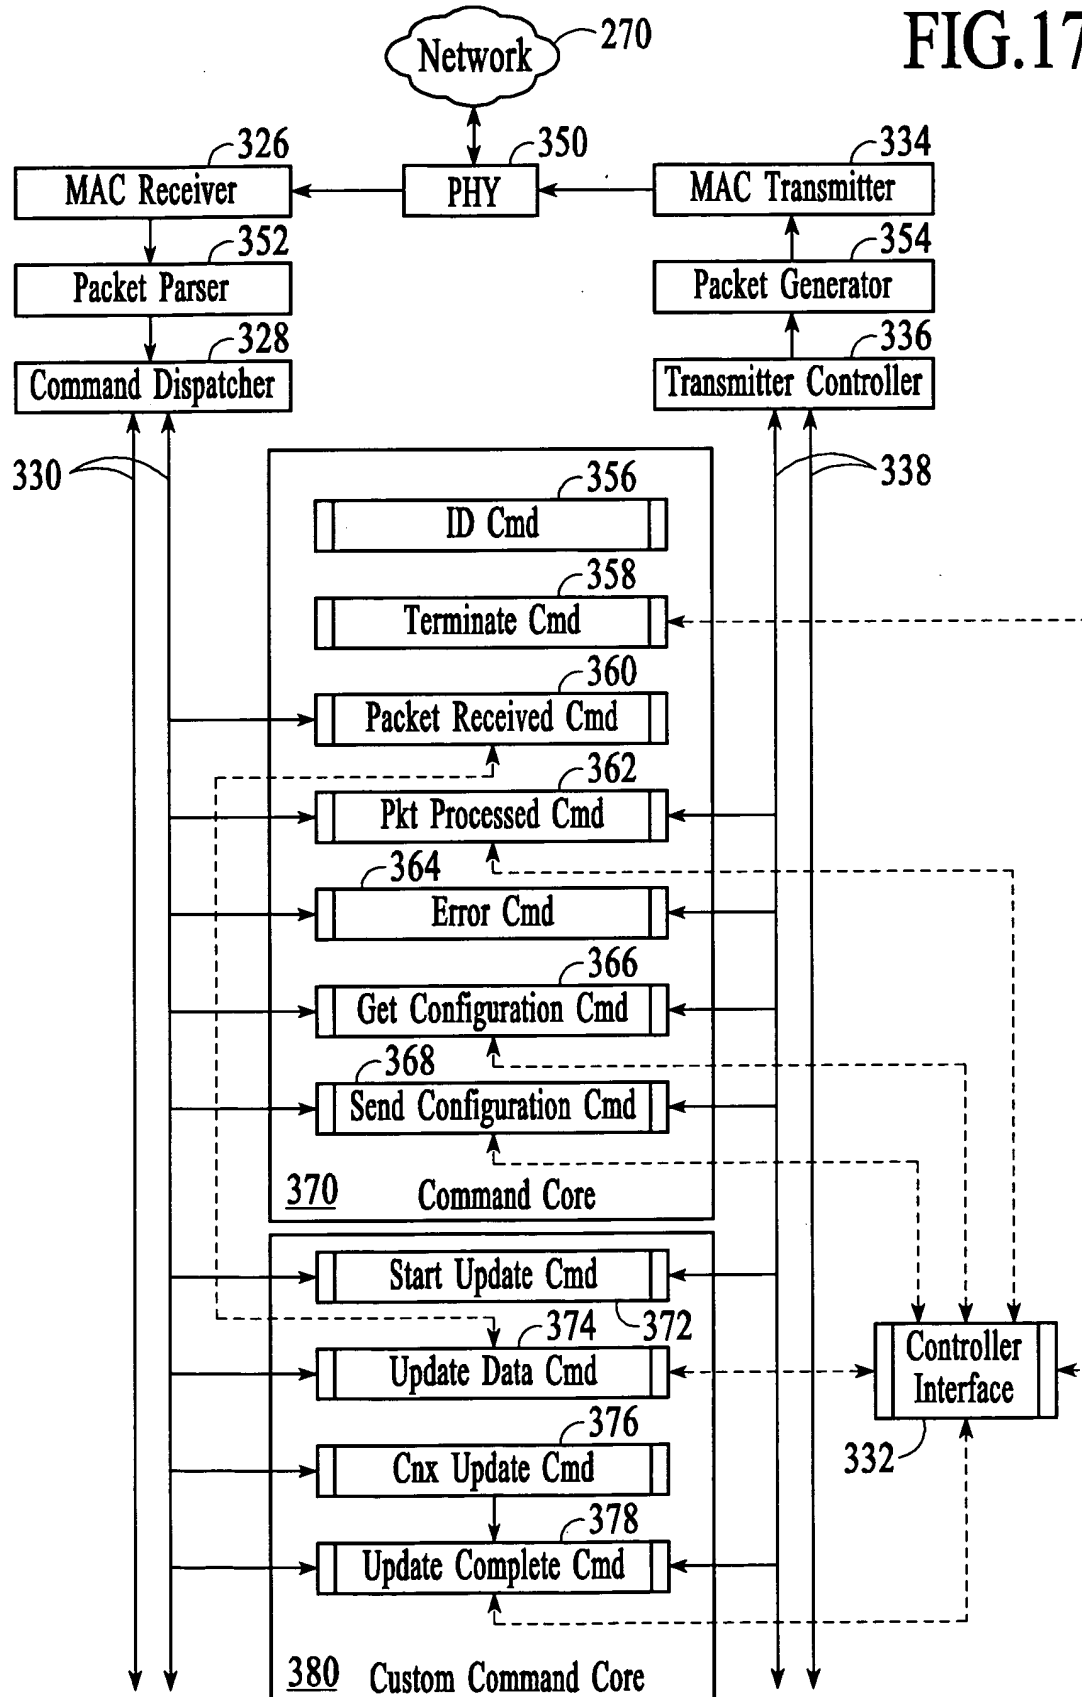

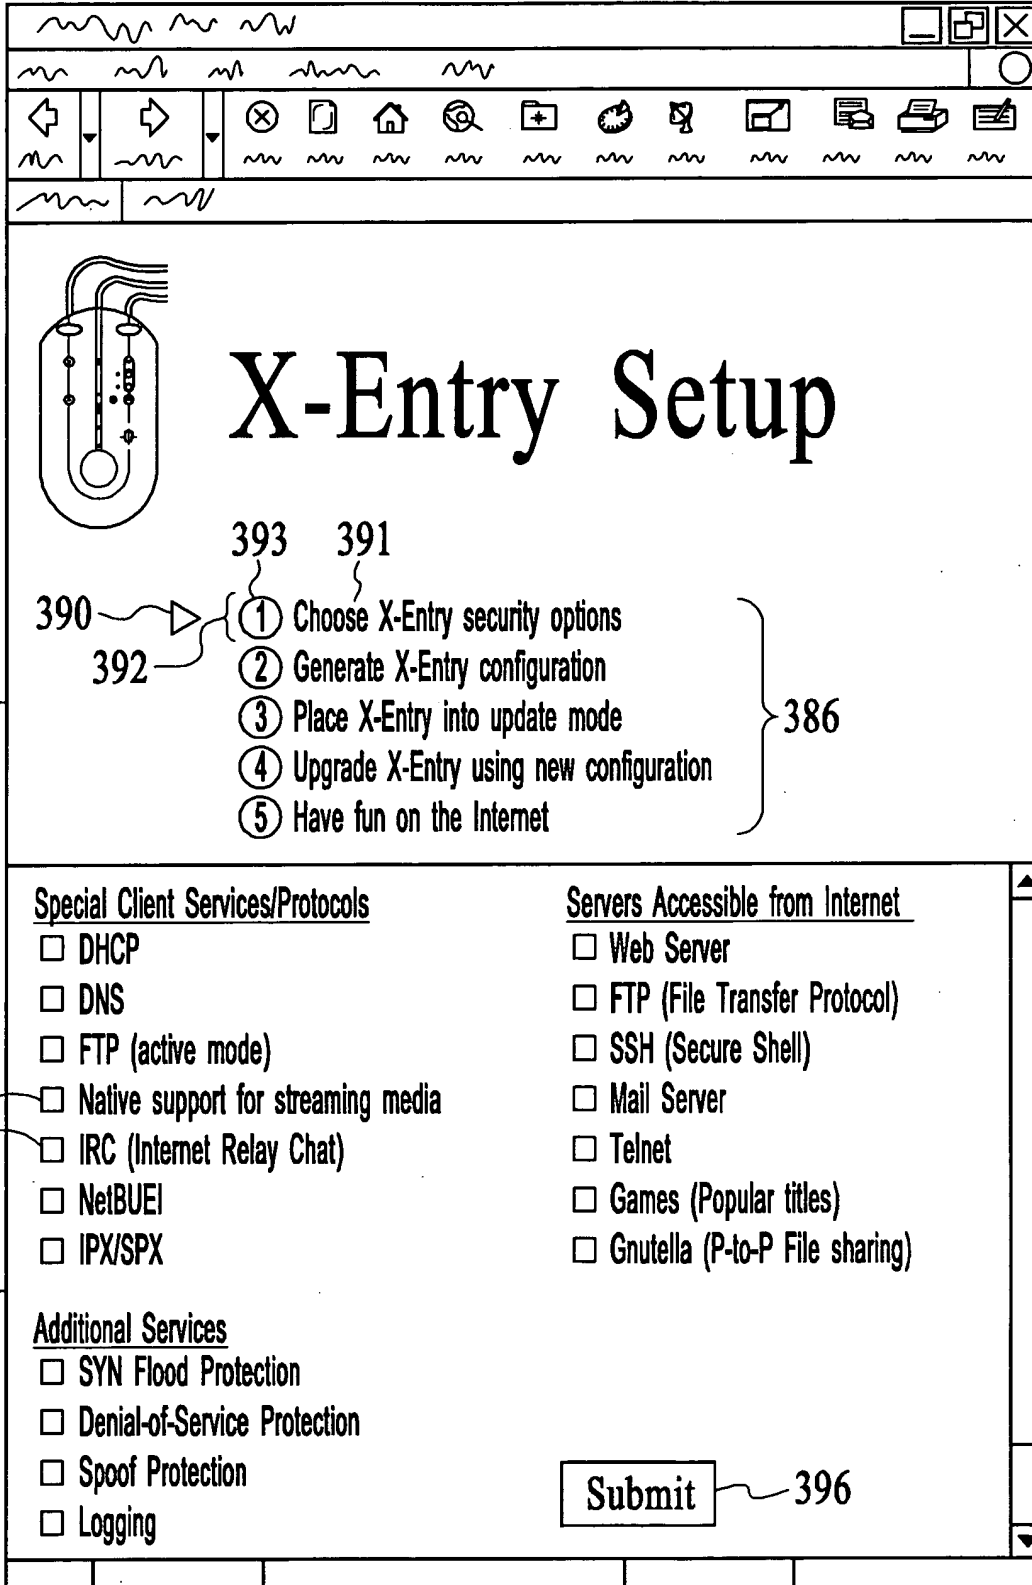

The diagram shows a window titled "X-Entry Setup" with a toolbar at the top containing various icons. Inside the window, there is a list of five steps for setting up X-Entry, a section for selecting client services and protocols, and a section for selecting additional services. A "Submit" button is located at the bottom right.

X-Entry Setup

390 → 392 → {

- ① Choose X-Entry security options
- ② Generate X-Entry configuration
- ③ Place X-Entry into update mode
- ④ Upgrade X-Entry using new configuration
- ⑤ Have fun on the Internet

386

Special Client Services/Protocols

- ☐ DHCP
- ☐ DNS
- ☐ FTP (active mode)
- ☐ Native support for streaming media
- ☐ IRC (Internet Relay Chat)
- ☐ NetBUEI
- ☐ IPX/SPX

Servers Accessible from Internet

- ☐ Web Server
- ☐ FTP (File Transfer Protocol)
- ☐ SSH (Secure Shell)
- ☐ Mail Server
- ☐ Telnet
- ☐ Games (Popular titles)
- ☐ Gnutella (P-to-P File sharing)

Additional Services

- ☐ SYN Flood Protection
- ☐ Denial-of-Service Protection
- ☐ Spoof Protection
- ☐ Logging

Submit

FIG.18

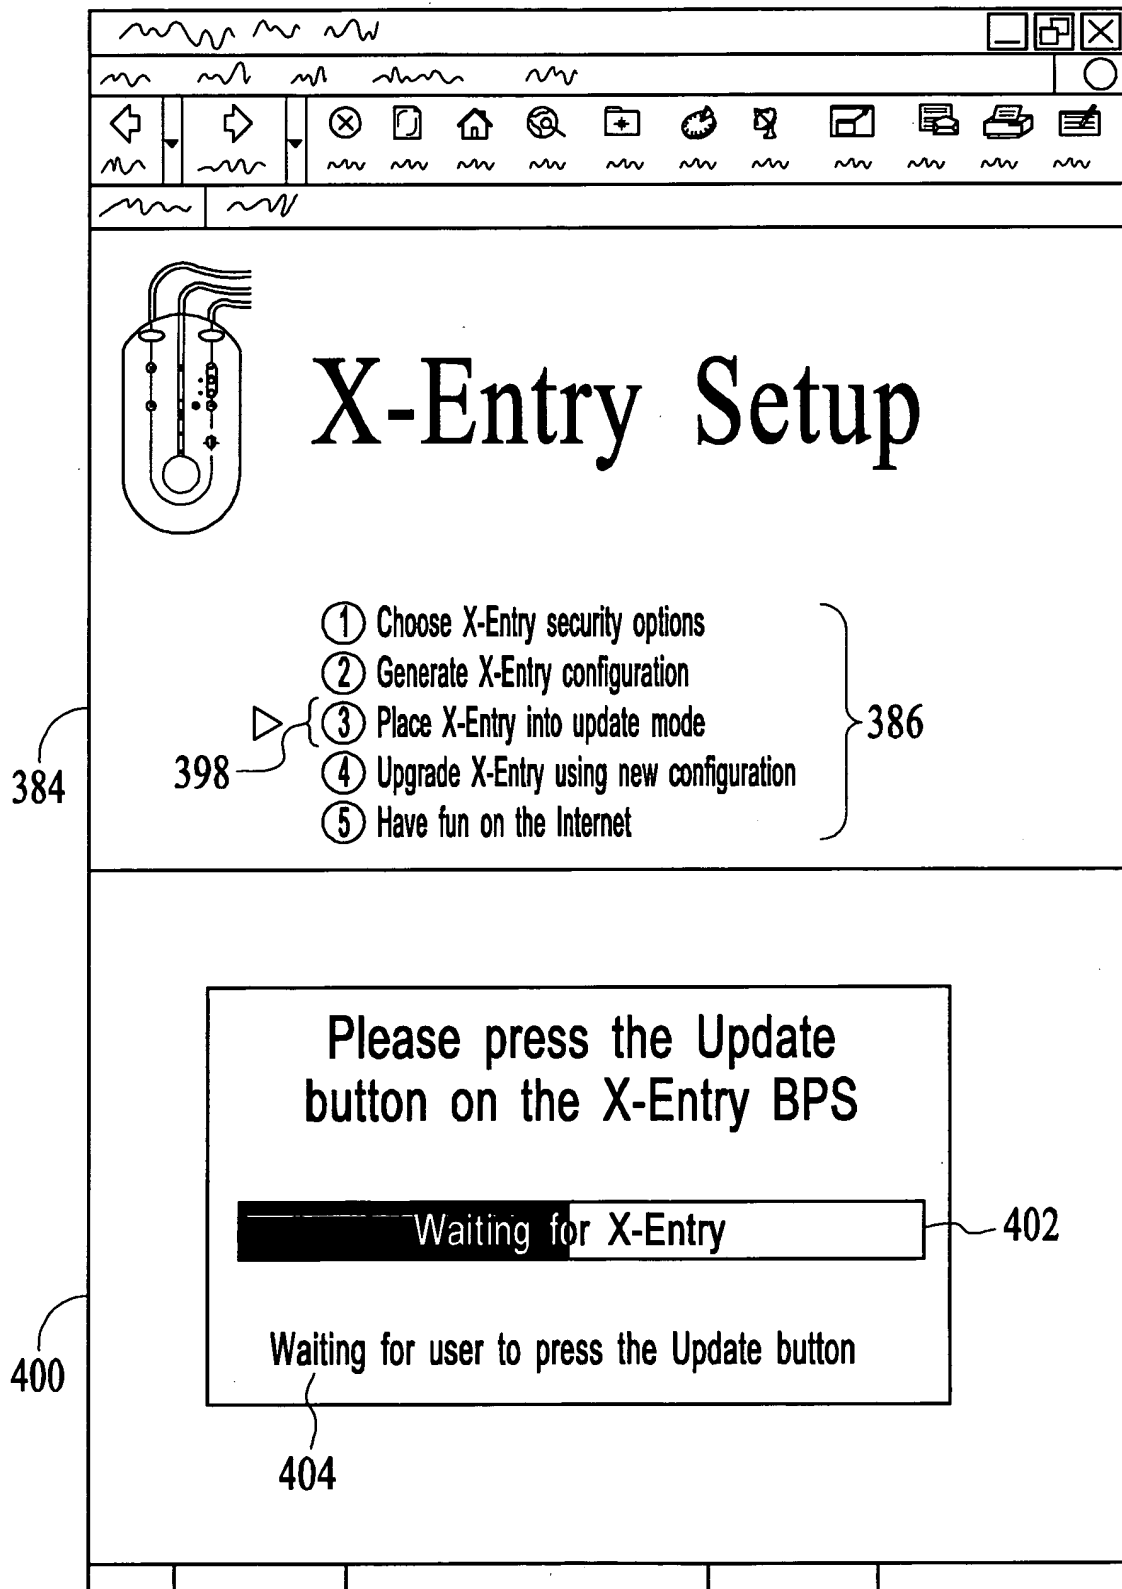


FIG.19

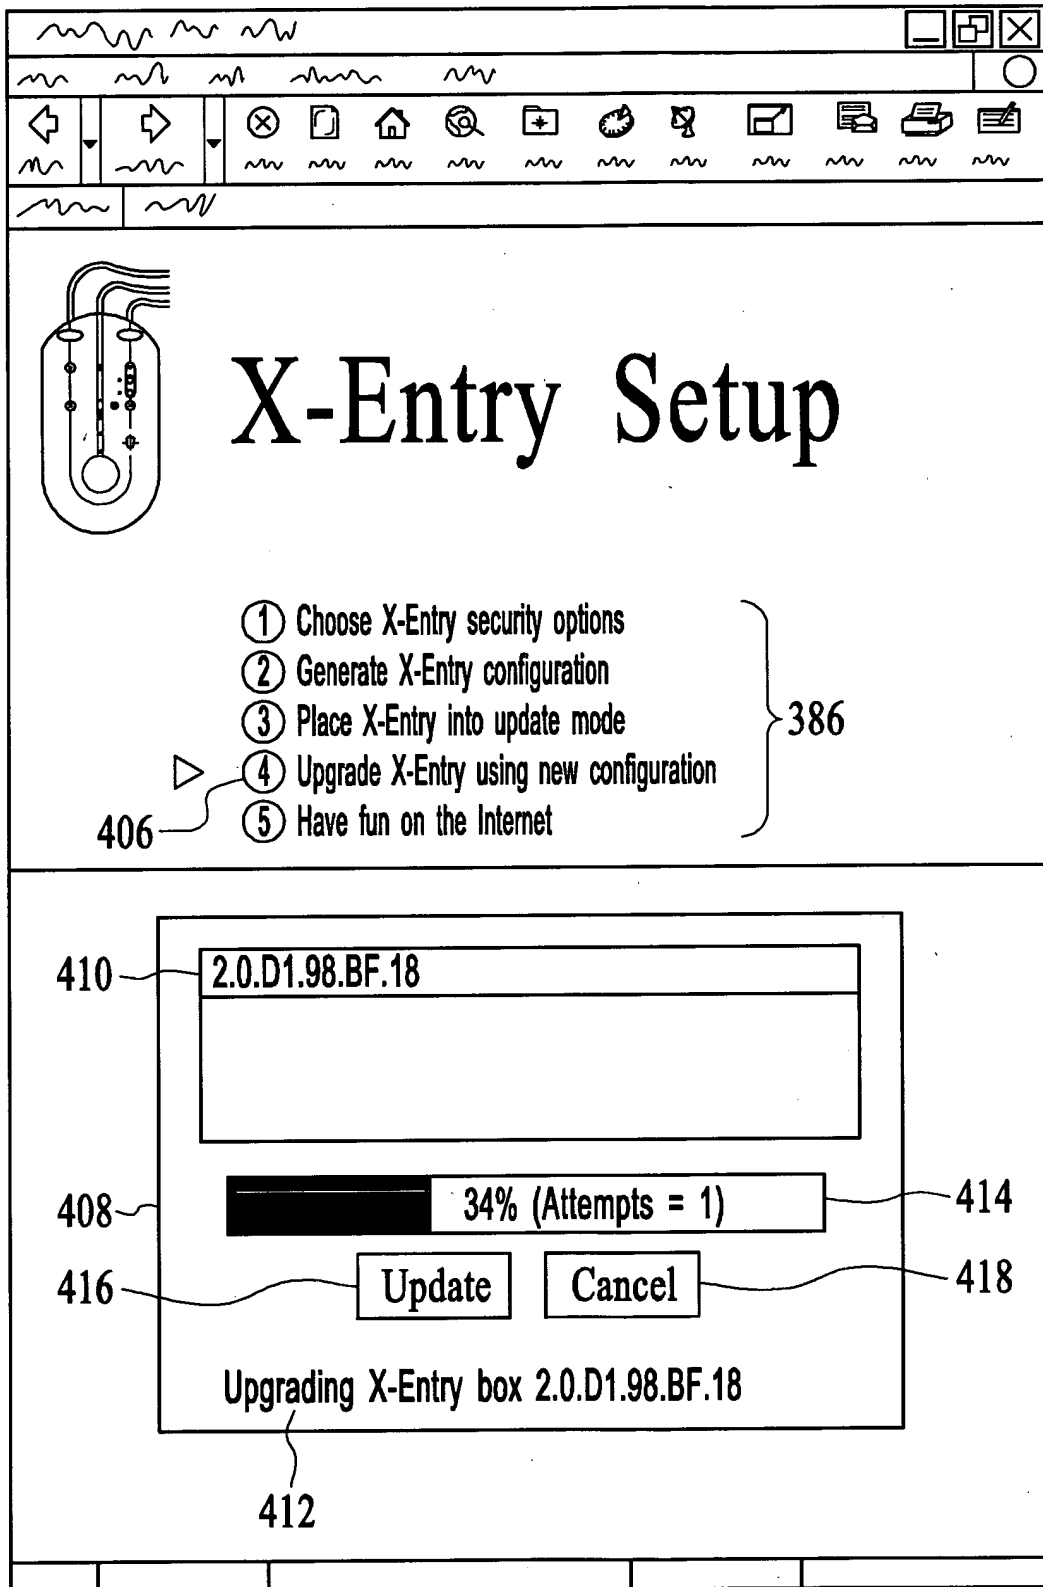
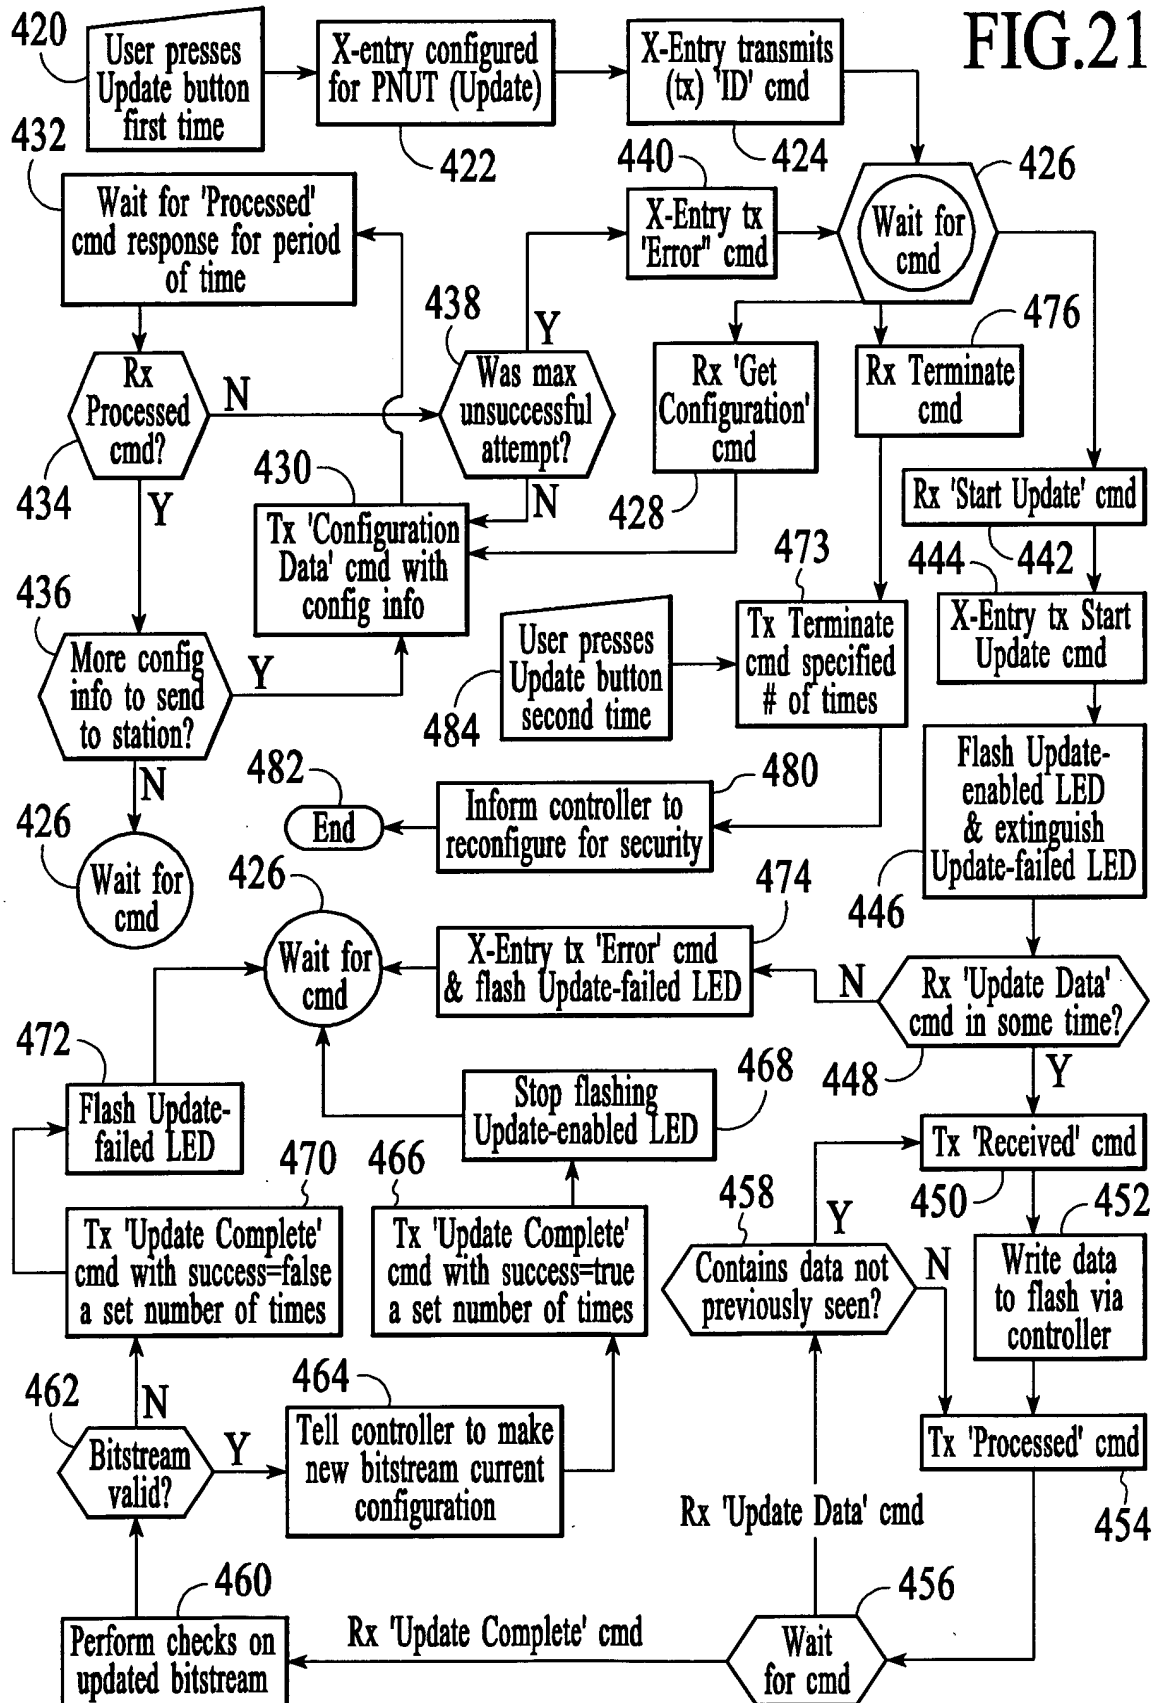


FIG.20

FIG.21



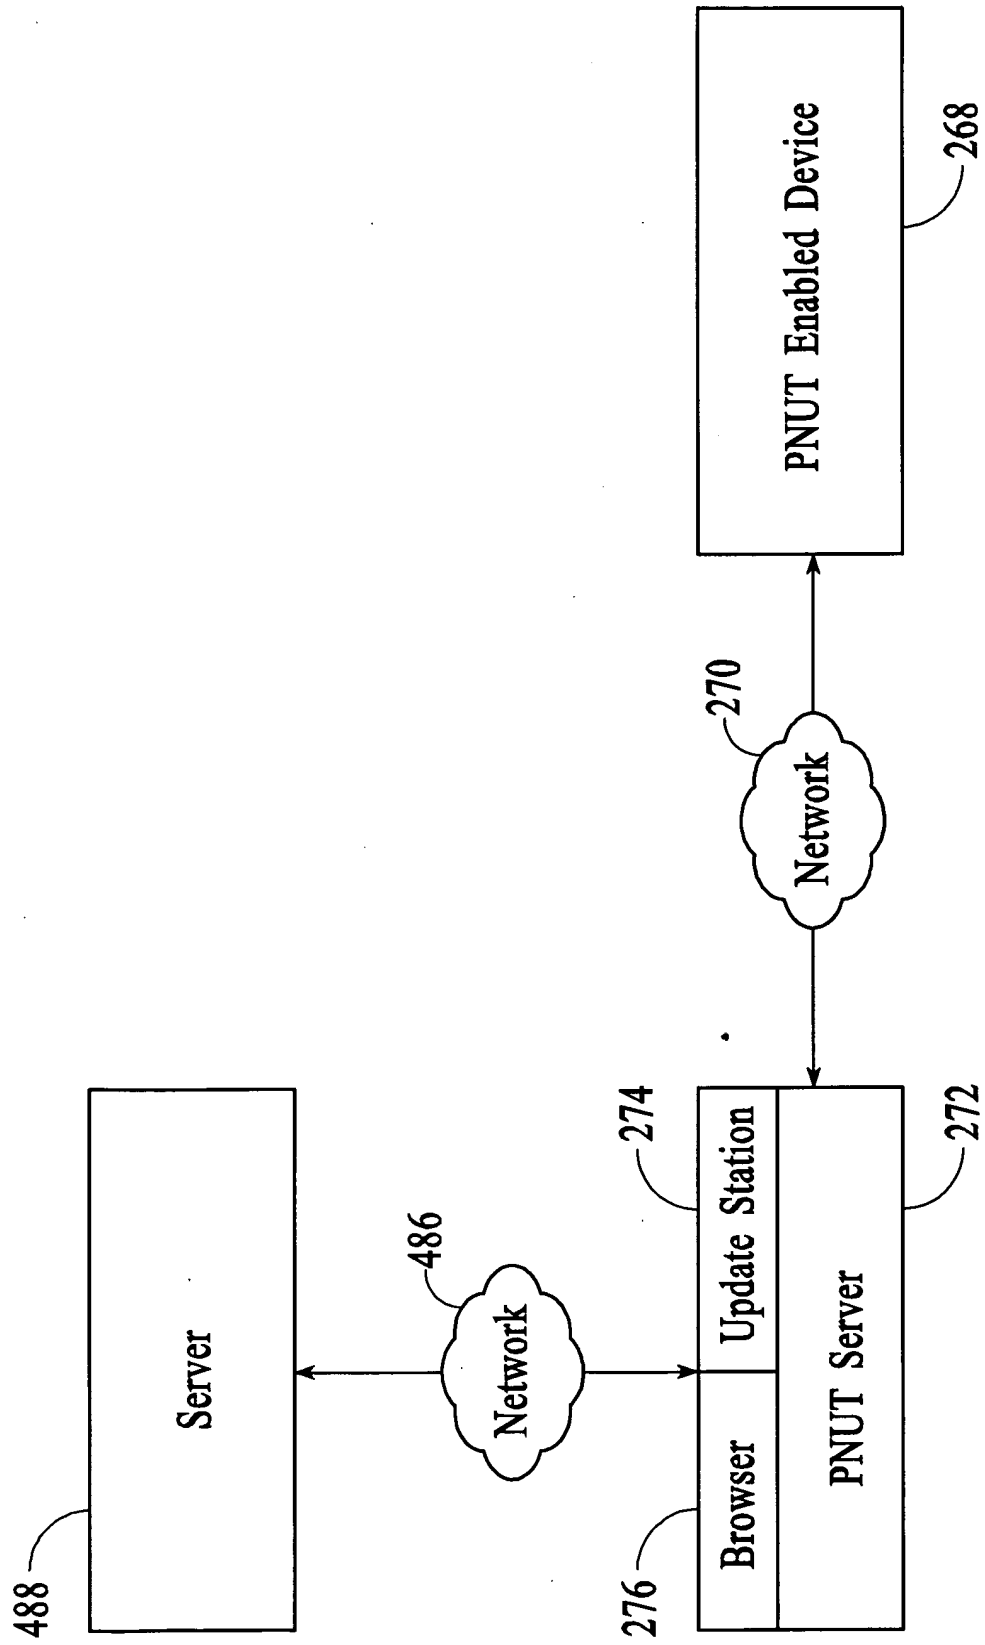


FIG.22

```

<?xml version = "1.0" encoding = "UTF-8"?>
<formats>
  <msg id = "128" name = "UPDATE_START_CMD">
    <desc> Start Pnut update</desc>
    <byte name = "type" transient = "true" />
    <bytes name = "checksum" size = "2" />
  </msg>
  <msg id = "129" name = "UPDATE_MSG_CMD">
    <desc> Pnut data update packet </desc>
    <bytes name = "packet number" size = "2" />
    <bytes name = "length" size = "2" transient = "true" />
    <bytes name = "data" min_size = "1" max_size = "500"
      transient = "true" max_print = "0" />
  </msg>
  <msg id = "130" name = "UPDATE_LAST_MSG_CMD">
    <desc> Last Pnut update packet </desc>
    <bytes name = "packet number" size = "2" transient = "true" />
    <pad size = "8" />
  </msg>
  <msg id = "132" name = "UPDATE_CNX_CMD">
    <desc> Cancel Pnut update </desc>
    <pad size = "24" />
  </msg>
  <msg id = "136" name = "UPDATE_COMP_CMD">
    <desc> Pnut update complete </desc>
    <bytes name = "status" size = "1" transient = "true">
      <status success = "0">
        <desc val = "0">Successful</desc>
        <desc val = "1">Bad packet checksum</desc>
        <desc val = "2">Flash write failure</desc>
        <desc val = "3">Update cancelled</desc>
      </status>
    </bytes>
    <pad size = "16" />
  </msg>
</formats>

```

Diagram annotations (line numbers and brackets):

- 494: Points to the start of the XML document.
- 496: Points to the opening tag of the first message.
- 498: Points to the closing tag of the first message.
- 500: Points to the opening tag of the second message.
- 504: Points to the closing tag of the second message.
- 502: Points to the opening tag of the third message.
- 506: Points to the opening tag of the fourth message.
- 508: Points to the closing tag of the fourth message.
- 510: Points to the opening tag of the fifth message.
- 512: Points to the opening tag of the sixth message.
- 513: Points to the opening tag of the seventh message.
- 514: Points to the opening tag of the eighth message.
- 516: Points to the opening tag of the status element.
- 518: Points to the opening tag of the status element.
- 520: Points to the closing tag of the status element.
- 522: Points to the closing tag of the status element.
- 492: A large bracket on the right side of the diagram, spanning from the first message to the last message.

FIG.23

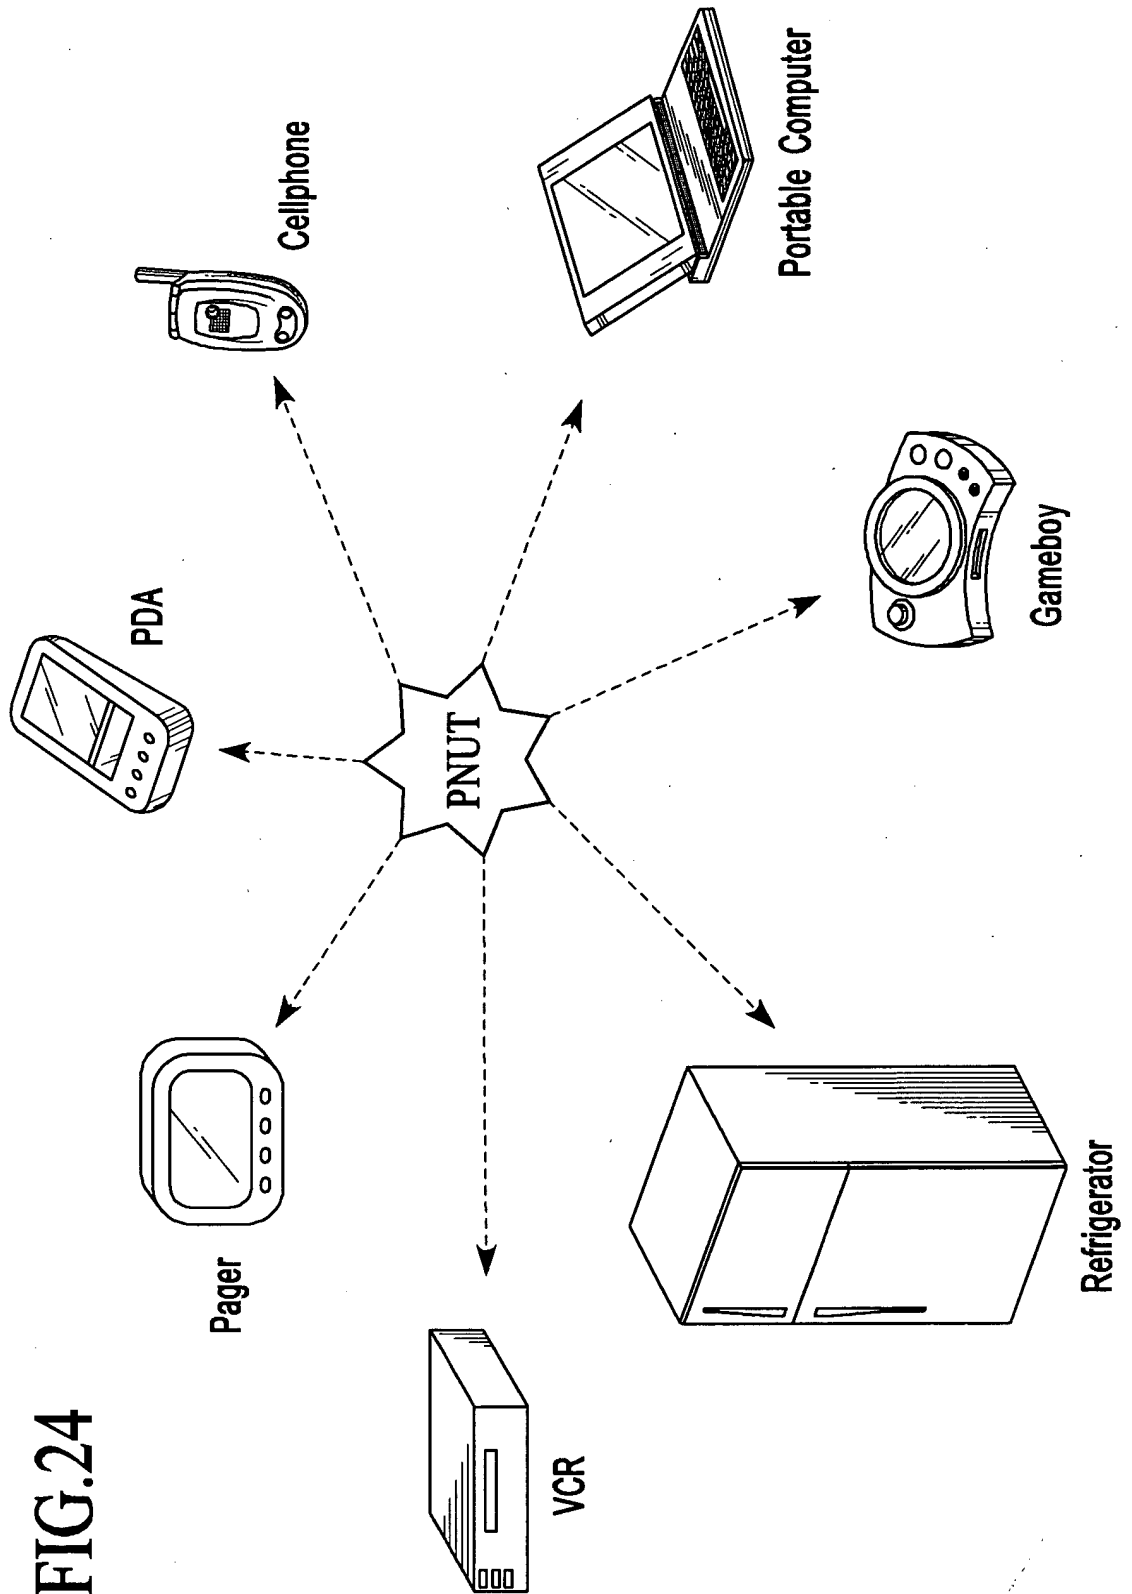


FIG.24